


DISASSEMBLY

1. REMOVE HEADLIGHT COVER SEAL

Remove the headlight cover seal from the headlight.

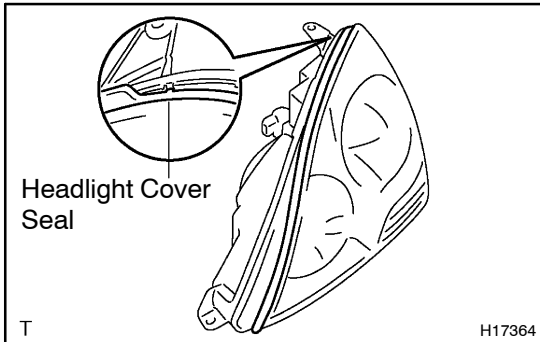

HINT:

At the time of reassembly, please refer to the following item. Fitting the seal projection into the indent of the headlight as shown in the illustration, install the seal to the headlight.

2. REMOVE LIGHT CONTROL COMPUTER

- (a) Remove the 2 screws and cover.
- (b) Disconnect the connector.
- (c) Remove the light control computer.