
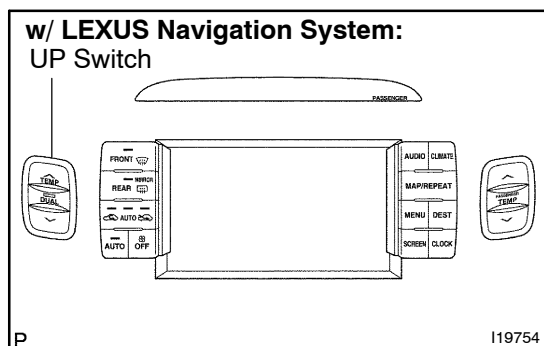
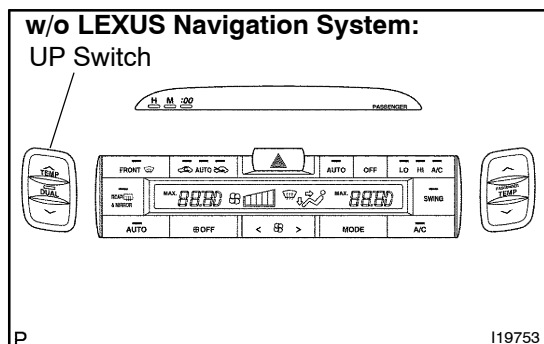
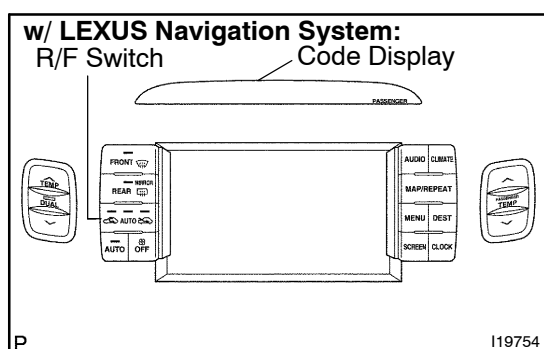


# ACTUATOR CHECK

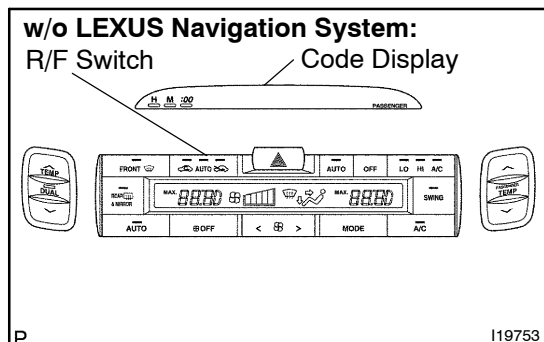

## 1. ACTUATOR CHECK

- (a) Turn the ignition switch to the ON position while pressing the A/C control AUTO switch and R/F (Recirculation / Fresh) switch simultaneously.
- (b) Press the R/F (Recirculation / Fresh) switch.
- (c) As each damper, motor and relay automatically operate the actuator check at 1 second intervals from step No.1 to No.10 continuously, check the temperature and air flow visually and by hand.

If a slower display is desired, press the driver temperature up switch and change the display in the step operation. Each time the driver temperature up switch is pressed, the display changes by 1 step.

## HINT:

- The buzzer sounds when the displayed trouble code changes.
- Codes are displayed from the smaller to the larger numbers in order.
- To cancel the check mode, press the "OFF" switch.

Step No.	Display Code	Conditions								
		Blower motor	Air flow vent	Max. cool damper	Air inlet damper	Magnetic clutch	Air mix damper	Water valve	Rear A/C	Deicer
1	0	0	FACE	0% open	FRESH	OFF	"COOL" side (0% open)	SHUT	OFF	OFF
2	1	1	FACE	0% open	FRESH	OFF	"COOL" side (0% open)	SHUT	LO A/P	ON
3	2	17	FACE	0% open	RECIRCULATION/FRESH FRESH*	ON	"COOL" side (0% open)	SHUT	HIA/P	OFF
4	3	17	FACE	100% open	RECIRCULATION	ON	"COOL" side (0% open)	OPEN	HIA/C	ON
5	4	17	BI-LEVEL	100% open	FRESH	ON	"COOL" / "HOT" (50% open)	OPEN	HIA/C	OFF
6	5	17	BI-LEVEL	100% open	FRESH	ON	"COOL" / "HOT" (50% open)	OPEN	LO A/C	ON
7	6	17	FOOT	100% open	FRESH	ON	"COOL" / "HOT" (50% open)	OPEN	OFF	OFF
8	7	17	FOOT	100% open	FRESH	ON	"HOT" side (100% open)	OPEN	OFF	ON
9	8	17	FOOT/DEF	100% open	FRESH	ON	"HOT" side (100% open)	OPEN	OFF	OFF
10	9	31	DEF	100% open	FRESH	ON	"HOT" side (100% open)	OPEN	OFF	ON

\*: G.C.C. Countries

A/P: Air purifier