

REMOVAL


NOTICE:

- Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)
- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.

HINT:

For the step 2 to 4, refer to Pub. No. RM792E on page BO-150.

1. REMOVE REAR SEAT CUSHION AND REAR SEAT-BACK (See Pub. No. RM792E on page BO-170 or BO-177)
2. REMOVE REAR DOOR SCUFF PLATE
3. REMOVE REAR DOOR OPENING TRIM
4. REMOVE REAR SEAT SIDE GARNISH

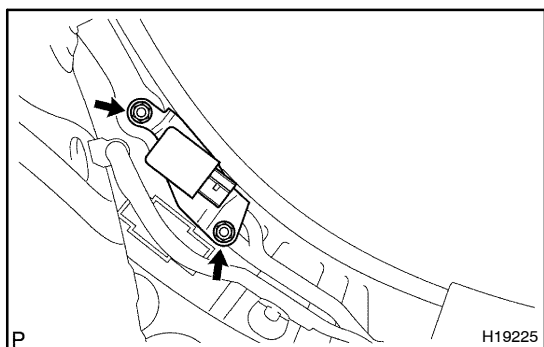

5. REMOVE CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Remove the bolt, nut and curtain shield airbag sensor assembly.