



## AIR REFINER FILTER REPLACEMENT

1. REMOVE LOWER COVER FROM LOWER NO.2 FINISH PANEL

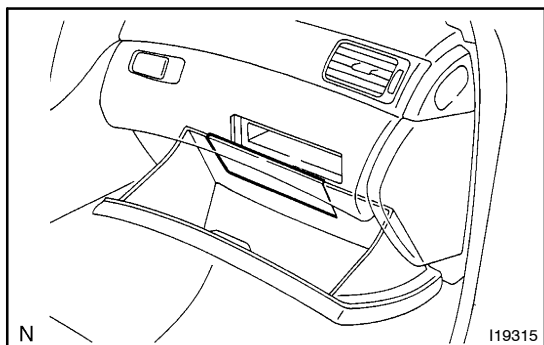

2. REMOVE AIR REFINER FILTER

- (a) Remove the filter cover.
- (b) Pull out the filter.

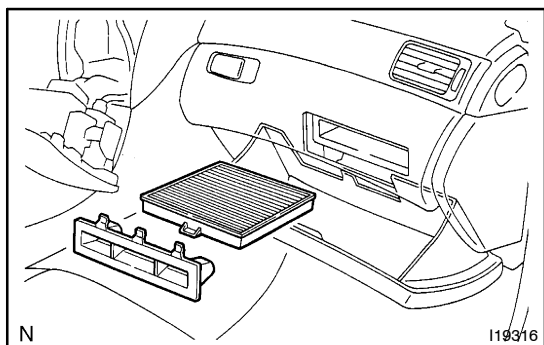

- (c) Remove the filter from the flame.

3. INSTALL NEW FILTER

- (a) Install the new filter to the flame.
- (b) Install the filter to blower unit.
- (c) Install the filter cover.

4. INSTALL LOWER COVER TO LOWER NO.2 FINISH PANEL

