


LOCATION

FL Block Assy

● D/C CUT H-fuse

● BATT Fuse

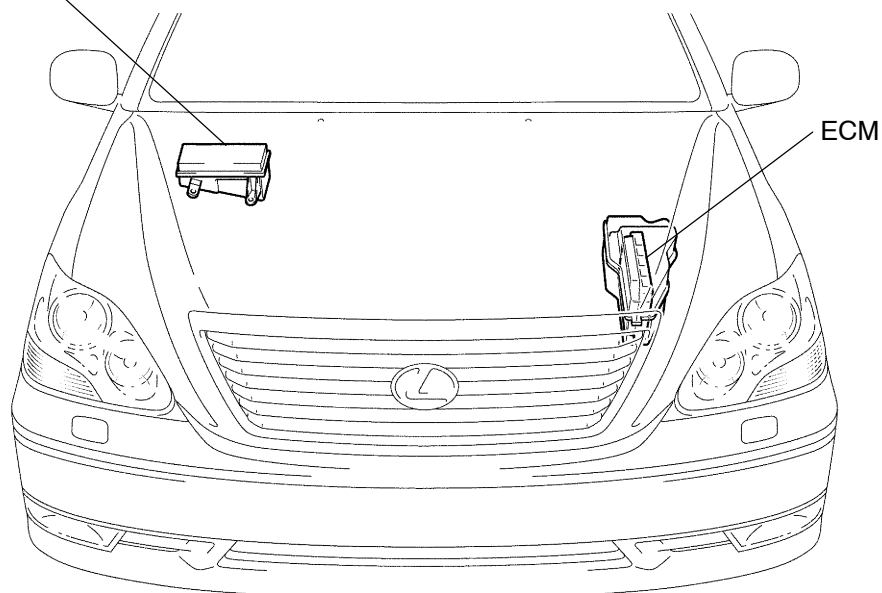

Transponder Key ECU Assy

Security Indicator

Passenger Side J/B


● Passenger Side J/B ECU

● AM2 Fuse

● MPX-B1 Fuse

Transponder Key Amplifier

Unlock Warning Switch

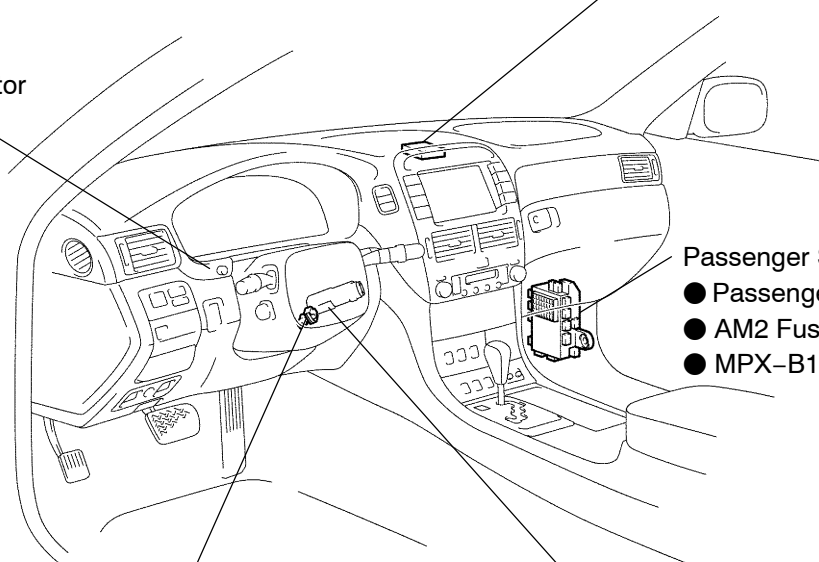

For RHD vehicles, look at the same location on the opposite side of the vehicle.