



# SCREEN FLICKER OR COLOR DISTORTION

## INSPECTION PROCEDURE


### 1 CHECK DISPLAY SETTING

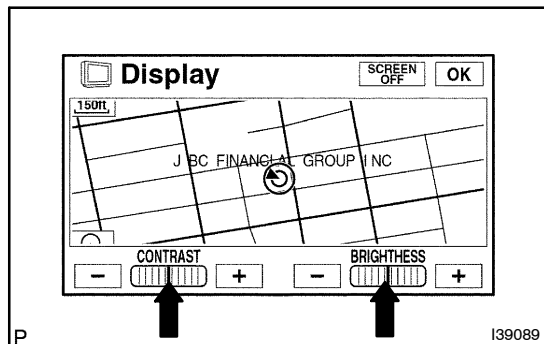

- (a) Enter the option screen by pressing the "OPTION" switch.
- (b) Enter the display adjustment screen by pressing the "DISPLAY" switch.
- (c) Reset display settings (contrast, brightness) and check if the screen appears normal.

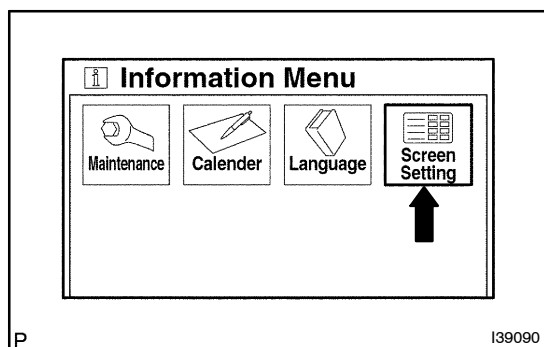

- (d) Press the "Information" switch and then the "Screen Setting" switch.

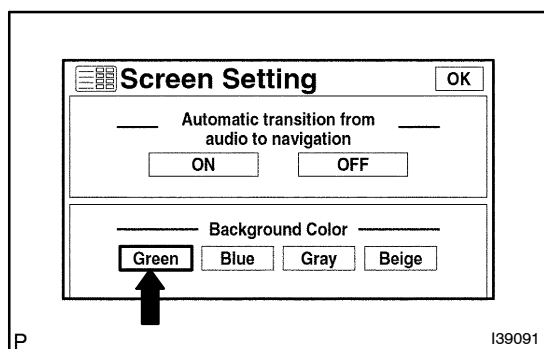

- (e) Set the "Background Color" to "Green" (initial setting) and check if it is normal.

**OK: Returns to normal.**

**OK** → **END**

**NG**

### 2 CHECK CABIN

- (a) Check if the cabin temperature is  $-20^{\circ}\text{C}$  ( $-4.0^{\circ}\text{F}$ ) or less.

**OK: Cabin is warmer than  $-20^{\circ}\text{C}$  ( $-4.0^{\circ}\text{F}$ ).**


**NG** →

**HEAT THE CABIN AND RECHECK THE TEMPERATURE**

**OK**

**3 DISPLAY CHECK MODE (COLOR BAR CHECK MODE)**

(a) Enter the "Display Check" mode (Color Bar Check Mode) (see page 05-1752).

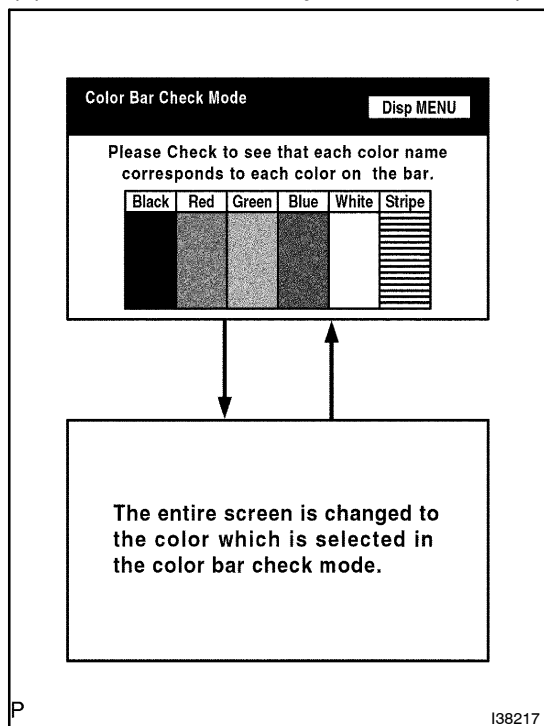

(b) Check that color bars match the displayed names.

**OK: Color bars match the displayed names.**


NG

**REPLACE MULTI-DISPLAY  
(SEE PAGE 67-8)**

OK

**4 NAVIGATION CHECK MODE (NAVI COLOR BAR CHECK)**

(a) Enter the "Navigation Check" mode (NAVI Color Bar Check) (see page 05-1758).

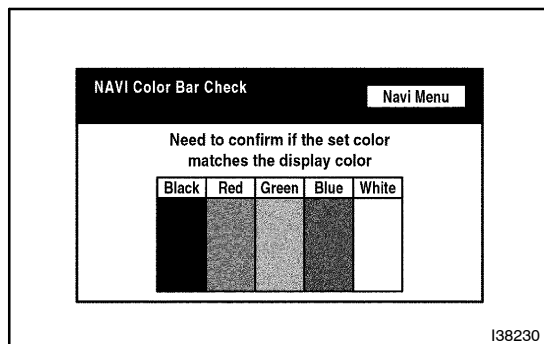

(b) Check that color bars match the displayed names.

**OK: Color bars match the displayed names.**

OK

**REPLACE MULTI-DISPLAY  
(SEE PAGE 67-8)**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1771)**