

LOCATION

LHD:Skid Control ECU
with Actuator

ECM

Steering Sensor

Junction Connector
(D-CAN J/C)

Gateway ECU


Junction Connector
(P-CAN J/C)


DLC3

Suspension Control
ECU

Yaw Rate Sensor

LHD:

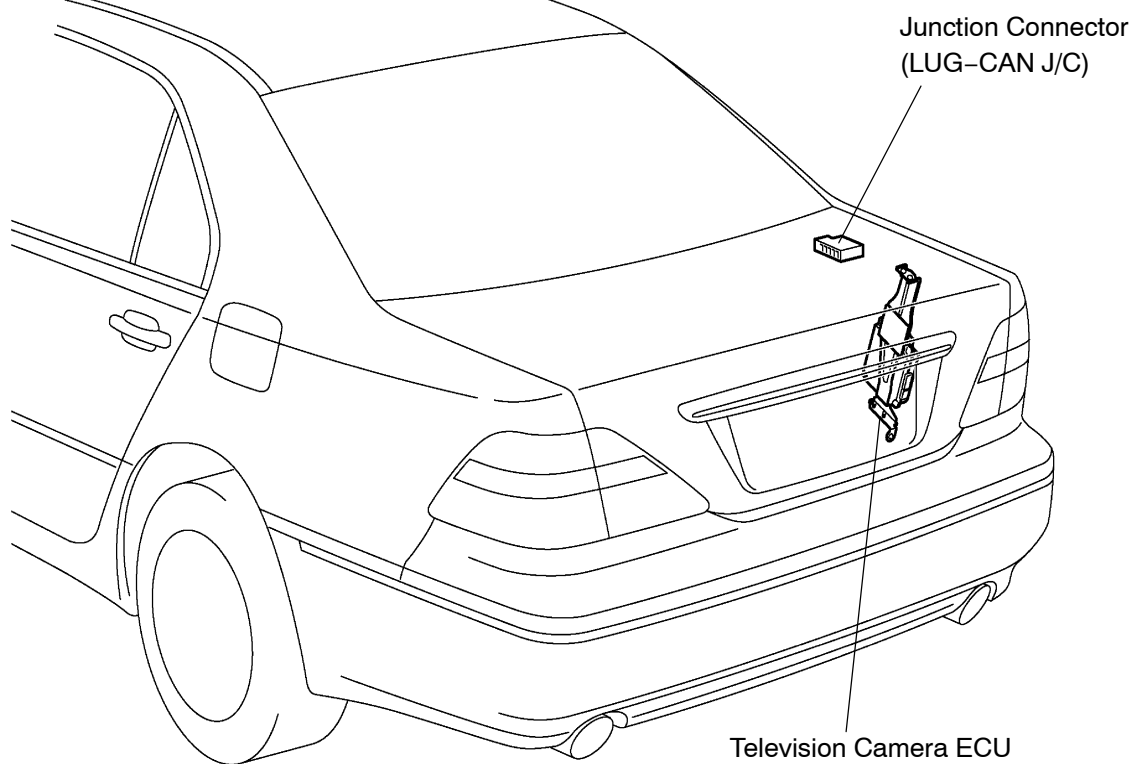

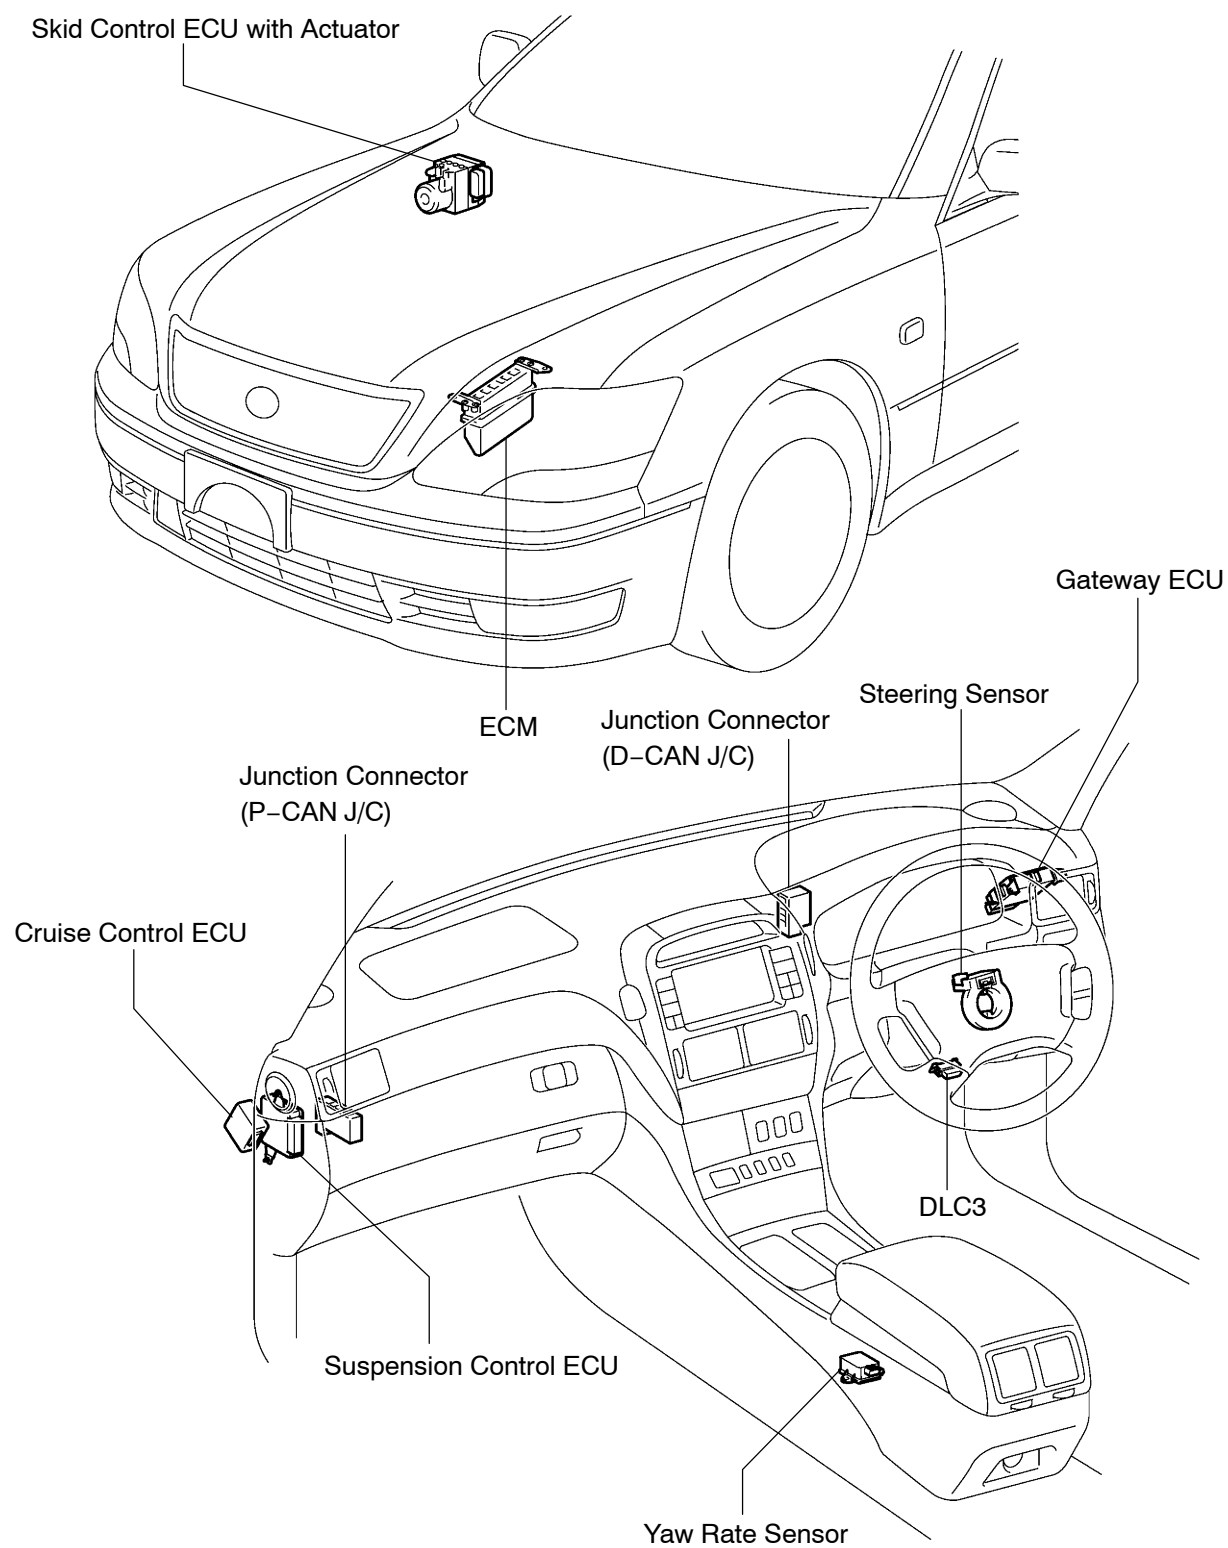RHD:

RHD: