


REMOVAL

1. REMOVE REAR AXLE HUB WITH UPPER SUSPENSION ARM (See page SA-51)

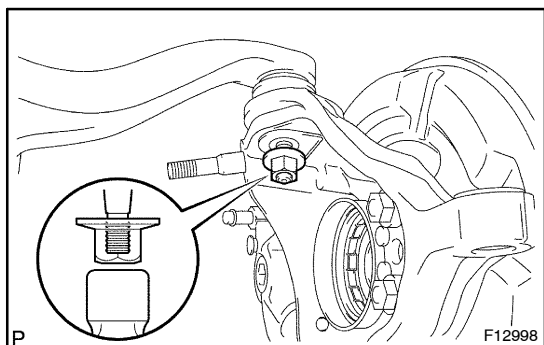

2. REMOVE UPPER SUSPENSION ARM

- (a) Install a bolt and nut to the axle carrier and secure it in a vise.
- (b) Loosen the nut to the position. Then tap the nut with a hammer and remove the upper suspension arm.

Torque: 70 N·m (720 kgf·cm, 52 ft·lbf)