

SOUND QUALITY IS BAD ONLY WHEN PLAYING TAPE

INSPECTION PROCEDURE

1 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK

(a) Replace the cassette tape with another one and recheck.

(1) Replace the cassette tape with another normal one to see if the same trouble occurs again.

OK: Malfunction disappears.

OK

CASSETTE TAPE IS FAULTY

NG

2 CHECK FOR ANY FOREIGN OBJECT

(a) Check for foreign objects.

(1) Check that no foreign objects or defects are detected in the cassette tape player.


OK: No foreign objects or defects are detected.

NG

REMOVE FOREIGN OBJECT

OK

3 CLEAN HEAD AND CHECK OPERATION

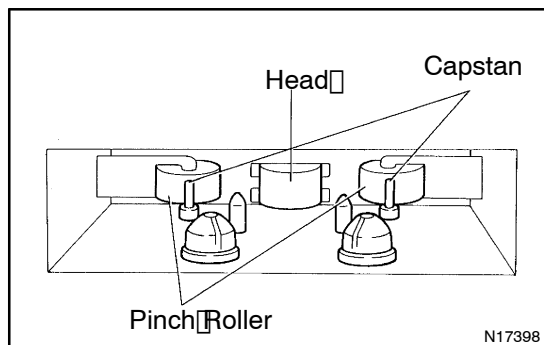

(a) Head cleaning

(1) Raise the cassette door with your finger. Using a pencil or similar object, push in the guide.

(2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.

(3) Check if the same trouble occurs again.

OK: Malfunction disappears.

NG

REPLACE RADIO RECEIVER ASSY
(SEE PAGE 67-5)

OK

HEAD IS DIRTY