


## DTC CHECK/CLEAR

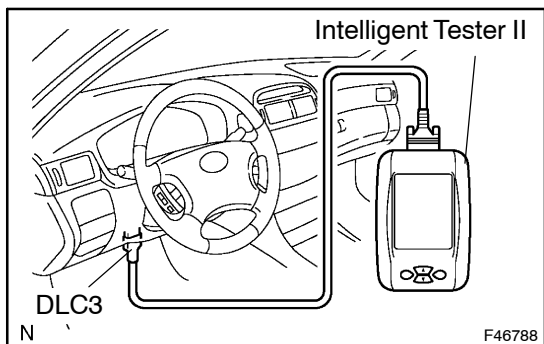

### 1. DTC CHECK

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch to the ON position.
- (c) Read DTCs by following the prompts on the tester screen.

#### HINT:

Please refer to the intelligent tester II operator's manual for further details.

### 2. DTC CLEAR

- (a) DTC can be erased by operating the intelligent tester II.

#### HINT:

Please refer to the intelligent tester II operator's manual for further details.