


INSPECTION

1. INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch pin free	-	Continuity
Switch pin pushed in	1 - 2	Continuity

If continuity is not as specified, replace the switch.

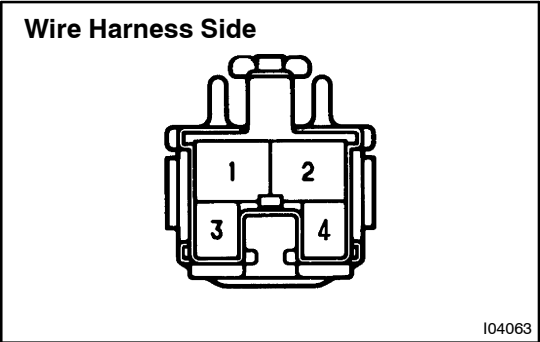

2. INSPECT STOP LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connector	Condition	Specified condition
2 - Ground	Constant	Battery positive voltage

If circuit is not as specified, inspect the power source or wire harness.