


REPLACEMENT


HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
1. **PRECAUTION** (SEE PAGE 60-1)
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (SEE PAGE 60-1)
 3. **REMOVE REAR DOOR SCUFF PLATE LH** (SEE PAGE 76-52)
 4. **REMOVE FRONT DOOR SCUFF PLATE LH** (SEE PAGE 76-52)
 5. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH** (SEE PAGE 76-52)
 6. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH** (SEE PAGE 76-52)
 7. **REMOVE CENTER PILLAR GARNISH LOWER LH** (SEE PAGE 76-52)
 8. **REMOVE FRONT SEAT OUTER BELT ASSY LH** (SEE PAGE 61-17)

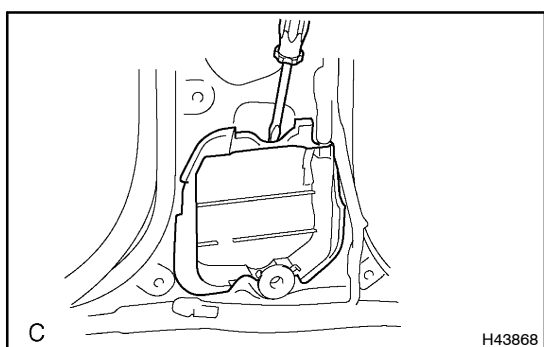


9. REMOVE FRONT SEAT BELT RETRACTOR COVER LH

- (a) Using a screwdriver, remove the front seat belt retractor cover LH.

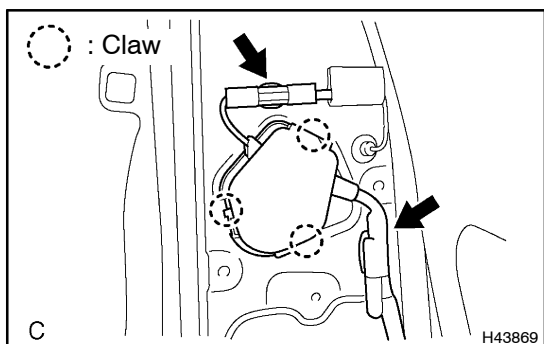

10. REMOVE WIRING HARNESS PROTECTOR NO.2

- (a) Disengage the 2 clamps.
- (b) Disengage the 3 claws and remove the wiring harness protector No.2.

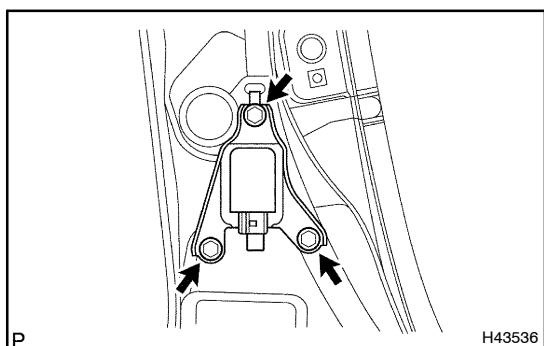

11. REMOVE SIDE AIR BAG SENSOR ASSY LH

- (a) Disconnect the connector from the side airbag sensor assy LH.
- (b) Remove the 3 bolts and the side airbag sensor assy LH.

12. INSTALL SIDE AIR BAG SENSOR ASSY LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the side air bag sensor assy LH with 3 bolts.

Torque: 20 N·m (205 kgf·cm, 15 ft. lbf)

NOTICE:

- If the side air bag sensor assy LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the side air bag sensor assy LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Connect the connector to the side air bag sensor assy LH.
- (e) Check that there is no looseness in the installation parts of the side air bag sensor assy LH.

13. INSTALL WIRING HARNESS PROTECTOR NO.2**14. INSTALL FRONT SEAT BELT RETRACTOR COVER LH****15. INSTALL FRONT SEAT OUTER BELT ASSY LH (SEE PAGE 61-17)****16. CONNECT BATTERY NEGATIVE TERMINAL****NOTICE:**

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

17. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)