


## DISASSEMBLY

### 1. REMOVE UPPER SUSPENSION ARM

- (a) Install a bolt and nut to the axle carrier and secure it in a vise.
- (b) Loosen the nut to the position shown in the illustration. Then tap the nut with a hammer and remove the upper suspension arm.
- (c) Release the axle carrier from the vise and remove the bolt and nut from the axle carrier.


### 2. REMOVE DUST DEFLECTOR

Using a screwdriver, remove the dust deflector.

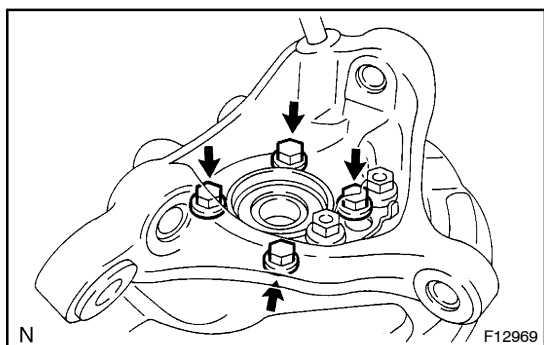

### 3. REMOVE AXLE HUB FROM AXLE CARRIER

- (a) Remove the 4 bolts and remove the axle hub from axle carrier with backing plate.

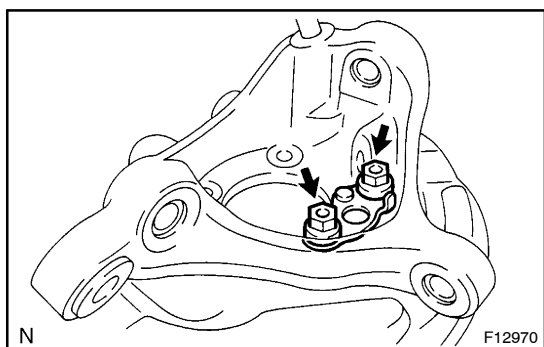

- (b) Remove the 2 nuts and parking brake cable support bracket.
- (c) Remove the backing plate from the axle carrier.