

## DISASSEMBLY


### 1. REMOVE A/C CONTROL PANEL ASSEMBLY

- Remove the 4 screws and 2 brackets.
- Disconnect the connector.
- Remove the 4 screws.
- Using a screwdriver, release the 4 claws and remove the A/C control panel assembly.

#### HINT:

Tape the screwdriver tip before use.

- Disconnect the connector from A/C panel.

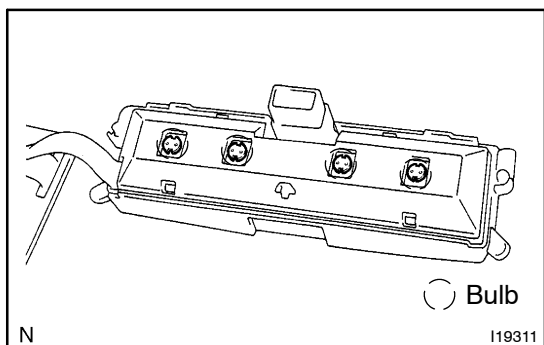

### 2. REMOVE LIGHTING VALVE

Using a screwdriver, turn the bulbs to the left and pull out the bulbs.