


## LOCATION

### FL Block Assy\*3

- D/C CUT Fuse
- ALT H-fuse
- LUG J/B H-fuse
- P-J/B H-fuse
- D-J/B F-fuse

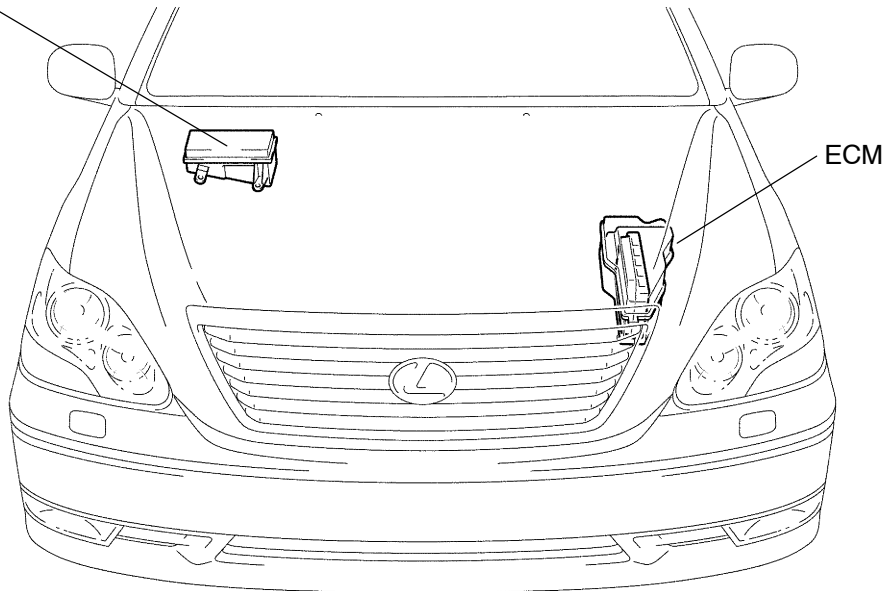

### Driver Side J/B\*3

- MPX-IG Fuse
- AM1 Fuse
- D-IG1 Relay

Gateway ECU\*3

Meter ECU\*3

Steering Lock  
ECU \*2, \*3

Transponder Key  
ECU\*1, \*3

### Passenger Side J/B\*3

- MPX-B1 Fuse
- MPX-B2 Fuse

Rear Seat Reset Switch

\*1: w/o Smart Key System

\*2: w/ Smart Key System

\*3: For RHD vehicles, look at the same location  
on the opposite side of the vehicle.

