


INSPECTION

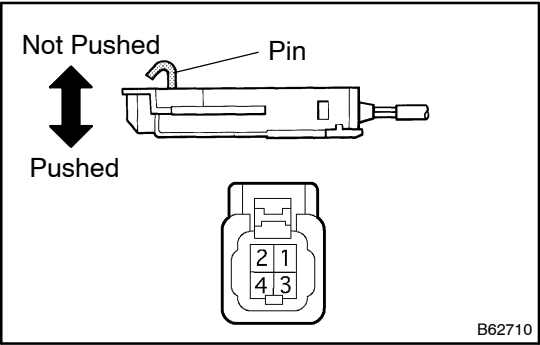


1. INSPECT UNLOCK WARNING SWITCH ASSY

- (a) Remove the unlock warning switch.
- (b) Measure the resistance of the switch.

Standard:

Tester Connection	Switch Condition	Specified Condition
1 - 2	Not pushed	10 kΩ or higher
1 - 2	Pushed	Below 1 Ω

If the result is not as specified, replace the switch assy.

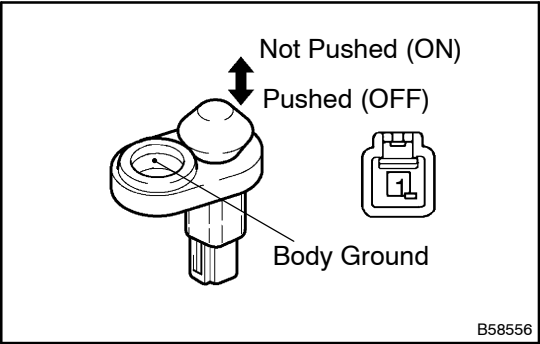

2. INSPECT FRONT DOOR COURTESY LAMP SWITCH (DRIVER SIDE)

- (a) Remove the courtesy lamp switch.
- (b) Measure the resistance of the switch.

Standard:

Tester Connection	Switch Position	Specified Condition
1 - Body ground	Not pushed (ON)	Below 1 Ω
1 - Body ground	Pushed (OFF)	10 kΩ or higher

If the result is not as specified, replace the switch assy.