



FUEL LID OPENER SYSTEM

LOCATION

BEOCV-03

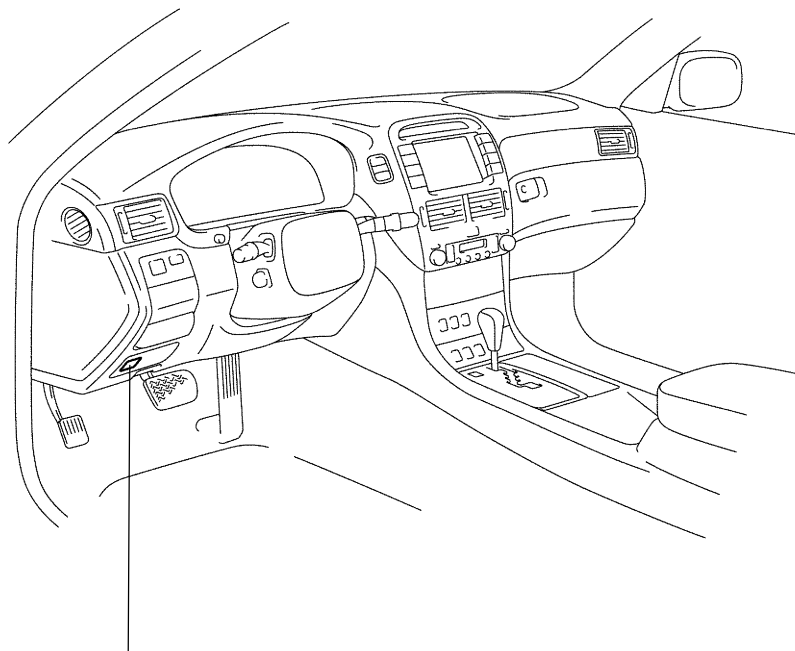

Fuel Lid Opener Switch

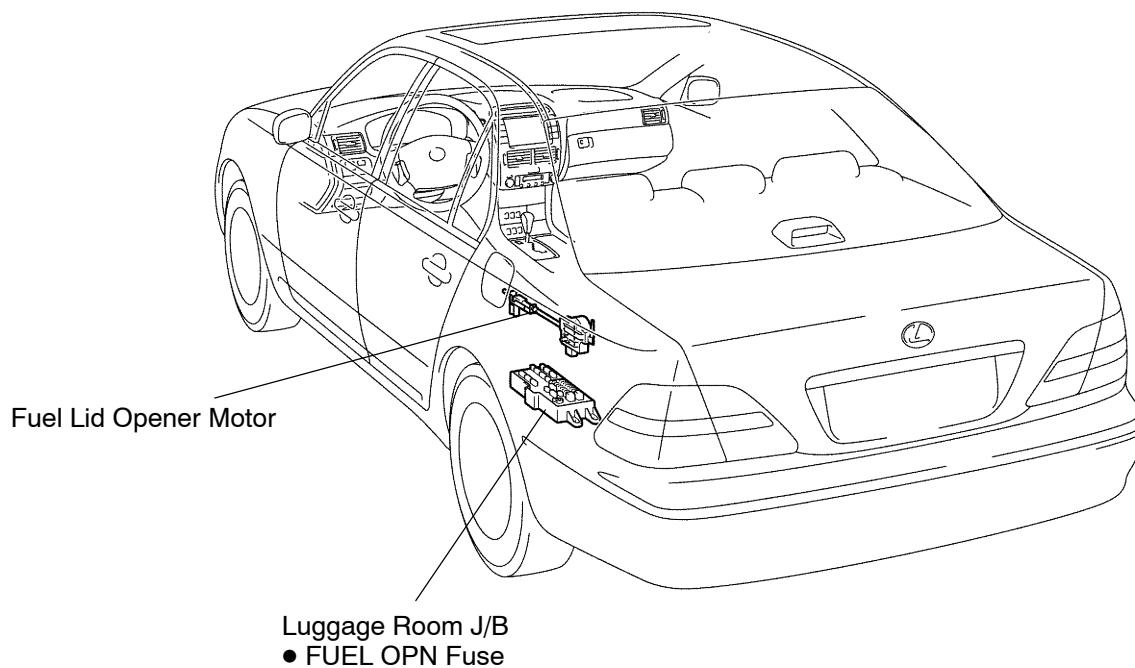

Fuel Lid Opener Motor

Luggage Room J/B
● FUEL OPN Fuse