


ACCELERATOR PEDAL ROD ASSY REPLACEMENT

100LR-01

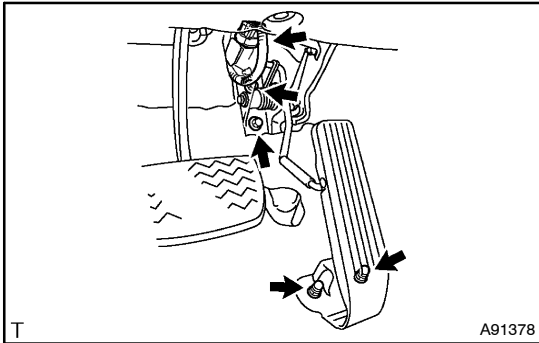

1. REMOVE ACCELERATOR PEDAL ROD ASSY

- (a) Disconnect the accelerator pedal position sensor connector.
- (b) Remove the 2 bolts, 2 nuts and accelerator pedal rod.

2. INSTALL ACCELERATOR PEDAL ROD ASSY

- (a) Connect the accelerator pedal position sensor connector.
- (b) Install the accelerator pedal rod with the 2 bolts and 2 nuts.

Torque: 7.5 N·m (76.5 kgf·cm, 66 in.·lbf)