


REPLACEMENT

HINT:

Installation is in the reverse order of removal.

- 1. PRECAUTION (SEE PAGE 60-1)
- 2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
- 3. REMOVE FRONT SEAT ASSY LH (SEE PAGE 72-3)

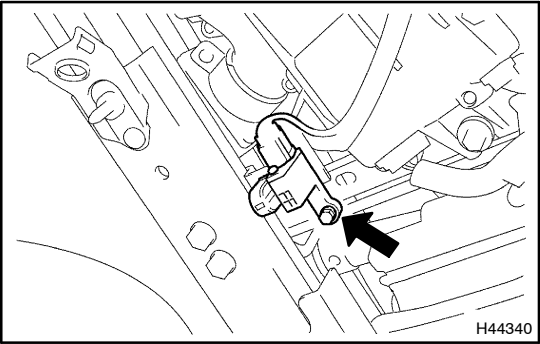

- 4. REMOVE SEAT POSITION AIR BAG SENSOR
  - (a) Disconnect the connector from the seat position air bag sensor.
  - (b) Remove the bolt and the seat position air bag sensor.

- 5. INSTALL SEAT POSITION AIR BAG SENSOR
  - (a) Check that the ignition switch is off.
  - (b) Check that the battery negative (-) terminal is disconnected.

**CAUTION:**  
After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the seat position air bag sensor with the bolt.  
Torque: 10 N·m (102 kgf·cm, 7 ft. lbf)

- NOTICE:**
- If the seat position air bag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
  - When installing the seat position air bag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Connect the connector to the seat position air bag sensor.
  - (e) Check that there is no looseness in the installation parts of the seat position air bag sensor.

- 6. INSTALL FRONT SEAT ASSY LH (SEE PAGE 72-3)
- 7. CONNECT BATTERY NEGATIVE TERMINAL

**NOTICE:**  
When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

- 8. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)