


TERMINALS OF ECU

1. CHECK TRANSPONDER KEY AMPLIFIER

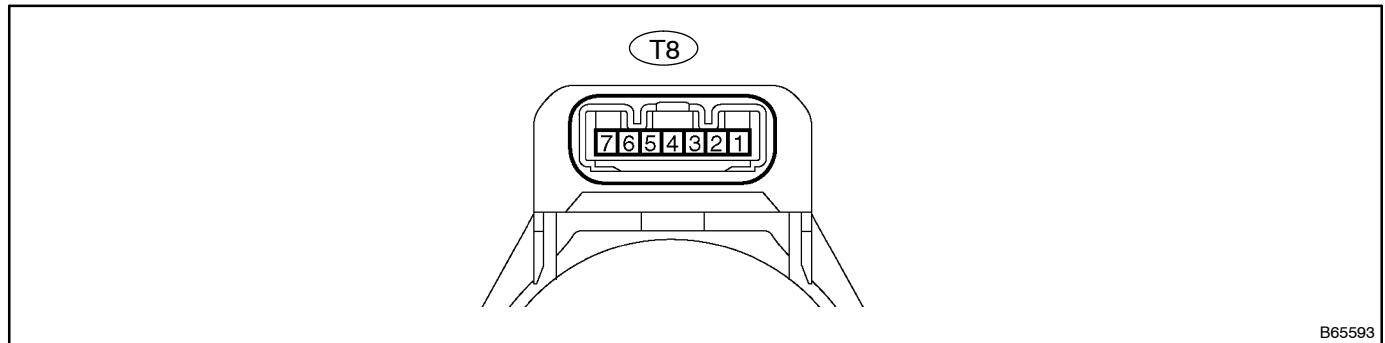

B65593

- (a) Disconnect the T8 amplifier connector.
- (b) Measure the resistance between the terminal of the wire harness side connector and body ground.

Standard:

Symbols (Terminal No.)	Wiring Color	Terminal Description	Condition	Specified Condition
GND (T8-7) – Body ground	V – Body ground	Ground	Constant	Below 1 Ω


If the result is not as specified, there may be a malfunction on the wire harness side.

- (c) Reconnect the T8 amplifier connector.
- (d) Measure the voltage and resistance between each terminal of the connector and body ground.

Standard:

Symbols (Terminal No.)	Wiring Color	Terminal Description	Condition	Specified Condition
+B (T8-1) – GND (T8-7)	O – V	Power source	No key in ignition key cylinder → Key inserted	0 V → 4.6 to 5.4 V
CODE(T8-4) – GND (T8-7)	R-W – V	Demodulated signal of key code data	No key in ignition key cylinder → Key inserted	Pulse generation (see waveform 1)
TXCT (T8-5) – GND (T8-7)	L-B – V	Key code output signal	No key in ignition key cylinder → Key inserted	Pulse generation (see waveform 2)
GND (T8-7) – Body ground	V – Body ground	Ground	Constant	Below 1 Ω


If the result is not as specified, the amplifier may have a malfunction.

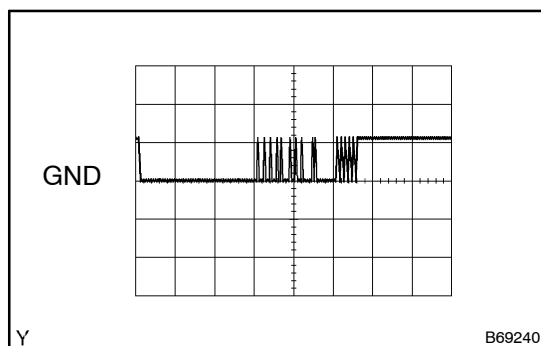

- (e) Inspect using an oscilloscope.

Waveform 1 (Reference):


Terminal	CODE – GND
Tool Setting	10 V/DIV., 20 ms/DIV.
Condition	No key in ignition key cylinder → Key inserted

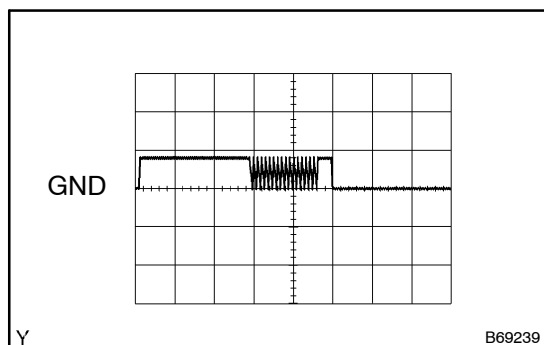

Waveform 2 (Reference):

Terminal	TXCT – GND
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	No key in ignition key cylinder → Key inserted

2. CHECK TRANSPONDER KEY ECU ASSY

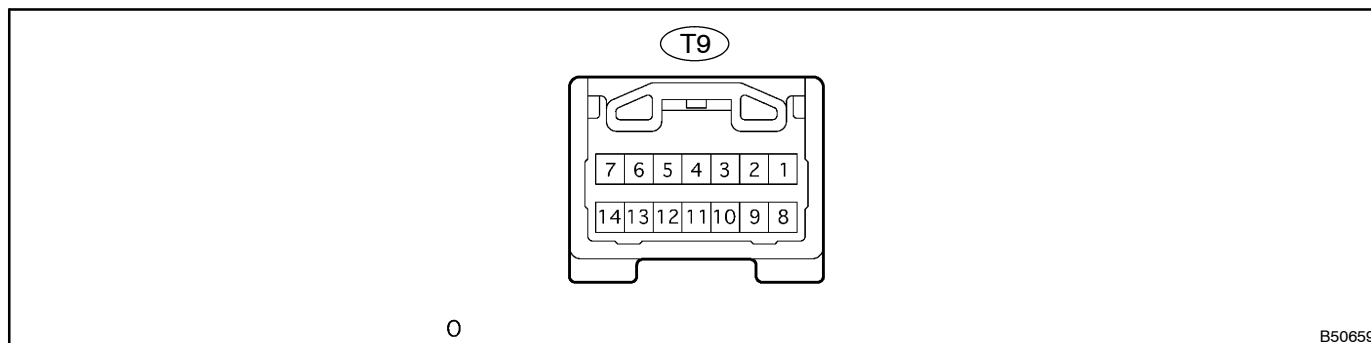

- Disconnect the T9 ECU connector.
- Measure the voltage and resistance between each terminal of the wire harness side connector and body ground.

Standard:

Symbols (Terminal No.)	Wiring Color	Terminal Description	Condition	Specified Condition
AGND (T9-13) – Body ground	V – Body ground	Ground	Constant	Below 1 Ω
CPUB (T9-1) – GND (T9-14)	V-Y – W-B	Battery	Constant	10 to 14 V
IG2 (T9-2) – AGND (T9-13)	B – V	Ignition switch	Ignition switch OFF → ON	0 V → 10 to 14 V
KSW (T9-3) – AGND (T9-13)	LG-B – V	Unlock warning switch	No key in ignition key cylinder → Key inserted	10 k Ω or higher → Below 1 Ω


If the result is not as specified, there may be a malfunction on the wire harness side.

- Reconnect the T9 ECU connector.
- Measure the voltage between each terminal of the connector.

Standard:


Symbols (Terminal No.)	Wiring Color	Terminal Description	Condition	Specified Condition
KSW (T9-3) – AGND (T9-13)	LG-B – V	Unlock warning switch	No key in ignition key cylinder → Key inserted	10 to 14 V → 0 V
VC5 (T9-9) – AGND (T9-13)	O – V	Power source	Ignition switch OFF → ON	0 V → 4.6 to 5.4 V
TXCT (T9-12) – AGND (T9-13)	L-B – V	Transponder key amplifier communication signal	Ignition switch OFF → ON	Pulse generation (see waveform 1)
CODE (T9-10) – AGND (T9-13)	R-W – V	Transponder key amplifier communication signal	Ignition switch OFF → ON	Pulse generation (see waveform 2)
EFIO (T9-6) – AGND (T9-13)	GR-G – V	ECM output signal	Ignition switch OFF → ON	Pulse generation (see waveform 3)
EFII (T9-7) – AGND (T9-13)	GR-R – V	ECM input signal	Ignition switch OFF → ON	Pulse generation (see waveform 4)

If the result is not as specified, the ECU may have a malfunction.

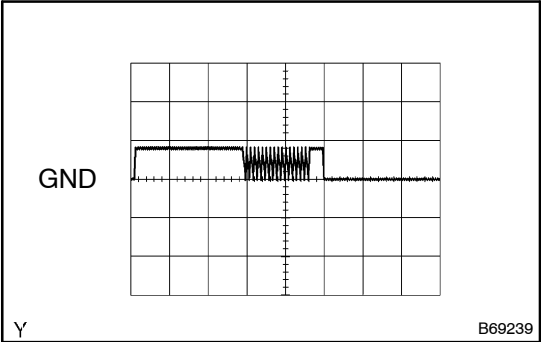


(e) Inspect using an oscilloscope.
Waveform 1 (Reference):

Terminal	TXCT – GND
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Ignition switch OFF → ON

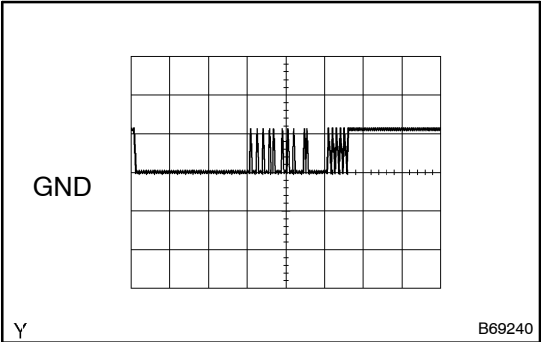


Waveform 2 (Reference):

Terminal	CODE – GND
Tool Setting	10 V/DIV., 20 ms/DIV.
Condition	Ignition switch OFF → ON

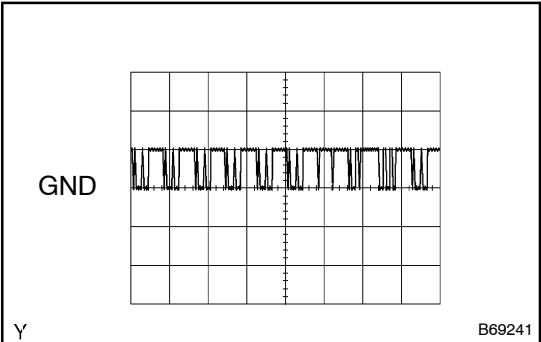

Waveform 3 (Reference):


Terminal	EFIO – GND
Tool Setting	10 V/DIV., 500 ms/DIV.
Condition	Ignition switch OFF → ON

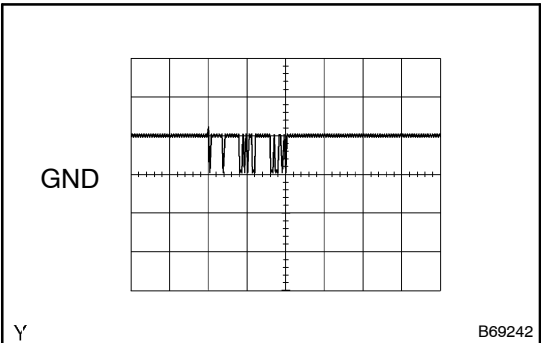

Waveform 4 (Reference):

Terminal	EFII – GND
Tool Setting	10 V/DIV., 500 ms/DIV.
Condition	Ignition switch OFF → ON

3. CHECK ECM

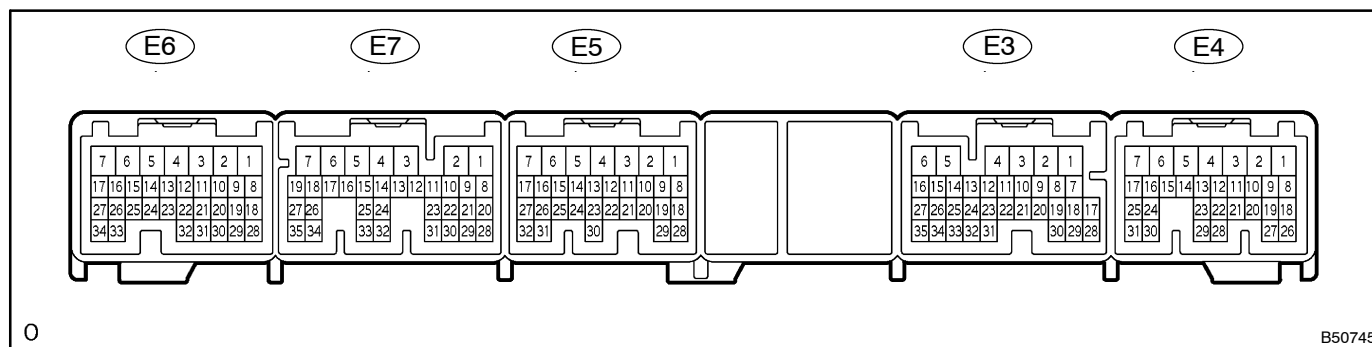


- Disconnect the E3 and E5 ECM connectors.
- Measure the voltage and resistance between each terminal of the wire harness side connectors and body ground.

Standard:

Symbols (Terminal No.)	Wiring Color	Terminal Description	Condition	Specified Condition
IMI (E3-6) – E01 (E5-2)	B-Y*1 – W-B GR-G*2 – W-B	Transponder key ECU input signal	No key in ignition key cylinder → Key inserted	Pulse generation (see waveform 1)
IMO (E3-7) – E01 (E5-2)	GR-R – W-B	Transponder key ECU output signal	No key in ignition key cylinder → Key inserted	Pulse generation (see waveform 2)
E01 (E5-2) – Body ground	W-B – Body ground	Ground	Constant	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.


*1: LHD *2: RHD

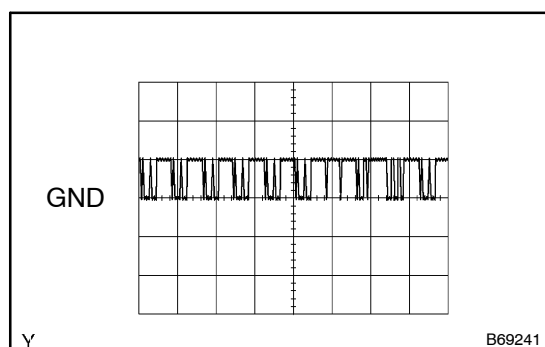

- Inspect using an oscilloscope.

Waveform 1 (Reference):

Terminal	IMI – GND
Tool Setting	10 V/DIV., 500 ms/DIV.
Condition	No key in ignition key cylinder → Key inserted

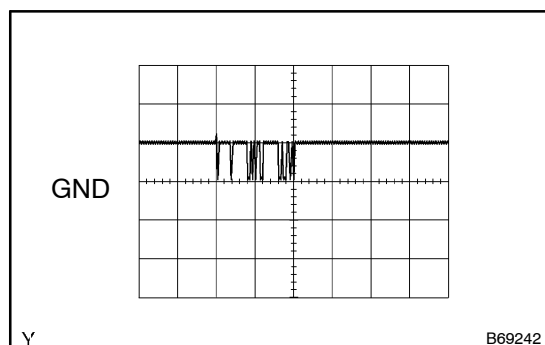

Waveform 2 (Reference):

Terminal	IMO – GND
Tool Setting	10 V/DIV., 500 ms/DIV.
Condition	No key in ignition key cylinder → Key inserted