

DIAGNOSIS CIRCUIT


CIRCUIT DESCRIPTION

Connecting terminals TC and CG of the DLC3 outputs trouble codes on the combination meter's multi-information display.

HINT:


When a warning lamp continuously blinks, a ground short in the wiring of terminal TC of the DLC3 or an internal ground short in the relevant ECU may be the cause.

WIRING DIAGRAM

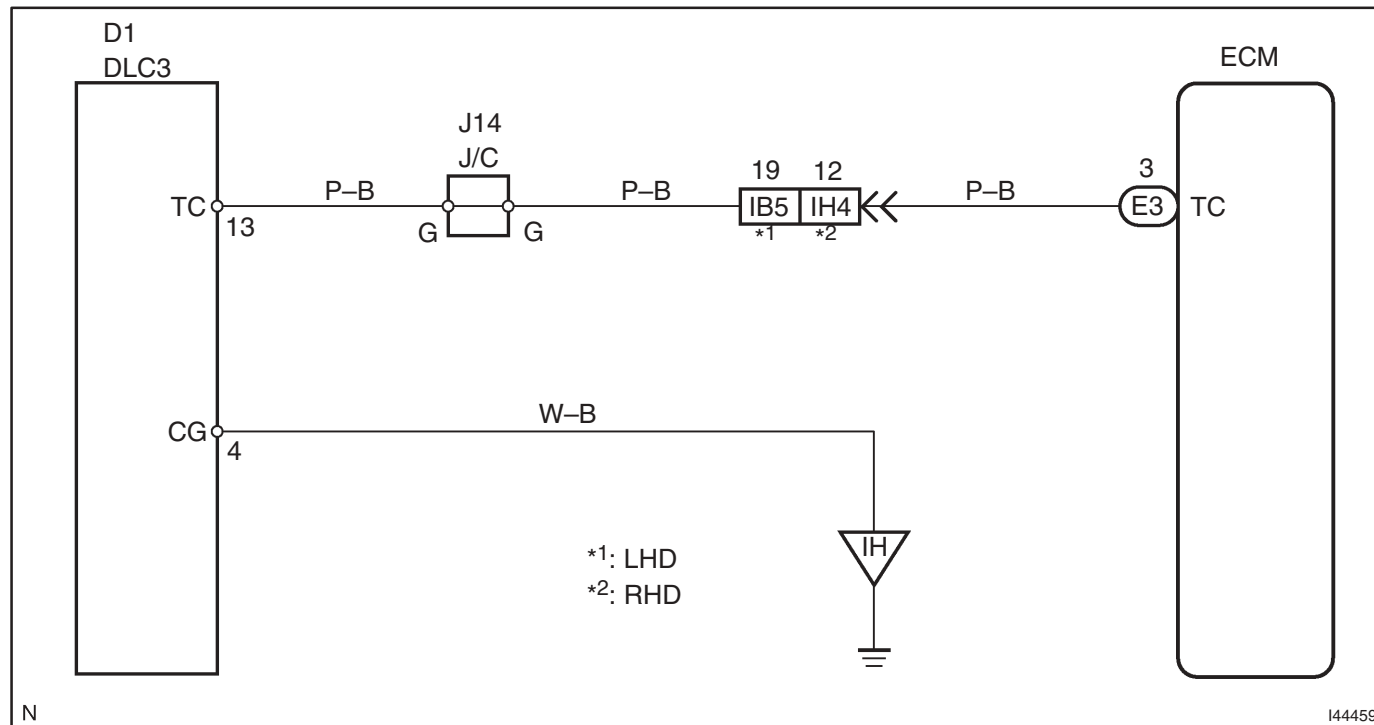

INSPECTION PROCEDURE

1 CHECK WIRE HARNESS (DLC3 – ECM)

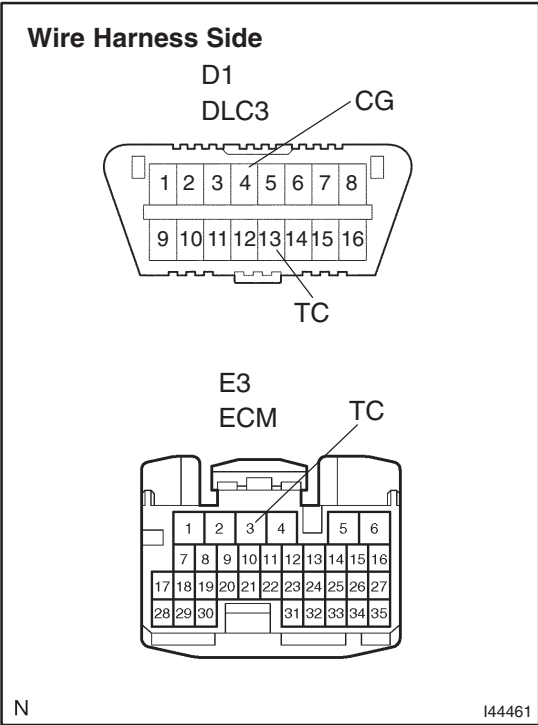

- (a) Disconnect the D1 DLC3 connector.
- (b) Disconnect the E3 ECM connector.
- (c) Measure the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
D1-4 (CG) – Body ground	Below 1 Ω
D1-13 (TC) – E3-3 (TC)	Below 1 Ω
E3-3 (TC) – Body ground	10 k Ω or higher

NG REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPLACE ECM (See Pub. No. RM1049E, page 10-21)