


REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
1. **PRECAUTION (SEE PAGE 60-1)**
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
 3. **REMOVE RADIATOR SIDE DEFLECTOR LH (SEE PAGE 76-3)**

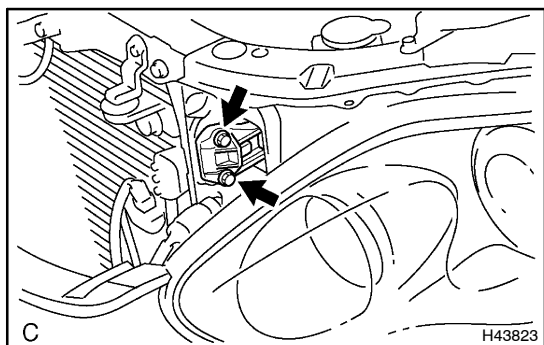

4. REMOVE AIR BAG SENSOR FRONT LH

- (a) Remove the 2 bolts and the airbag sensor front LH.
- (b) Disconnect the connector from the airbag sensor front LH.

5. INSTALL AIR BAG SENSOR FRONT LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Connect the connector to the airbag sensor front LH.
- (d) Install the airbag sensor front LH with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in. lbf)

NOTICE:

- If the airbag sensor front LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag sensor front LH, take care that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (e) Check that there is no looseness in the installation parts of the airbag sensor front LH.

6. INSTALL RADIATOR SIDE DEFLECTOR LH (SEE PAGE 76-3)

7. CONNECT BATTERY NEGATIVE TERMINAL

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

8. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)