



REMOVAL

1. REMOVE LOWER CENTER FINISH PANEL
2. REMOVE LOWER CENTER CLUSTER FINISH PANEL
3. REMOVE RADIO ASSEMBLY

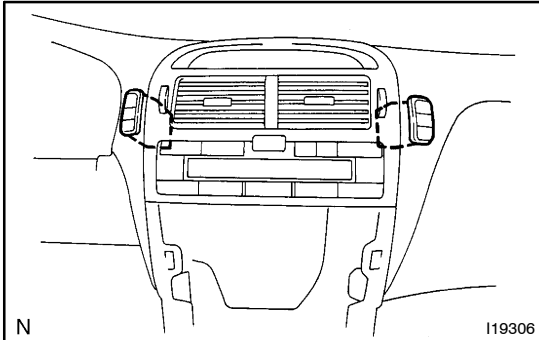


4. REMOVE CENTER CLUSTER


- (a) Using a screwdriver, release the 4 claws and remove the temperature control switches.
- (b) Disconnect the connectors.

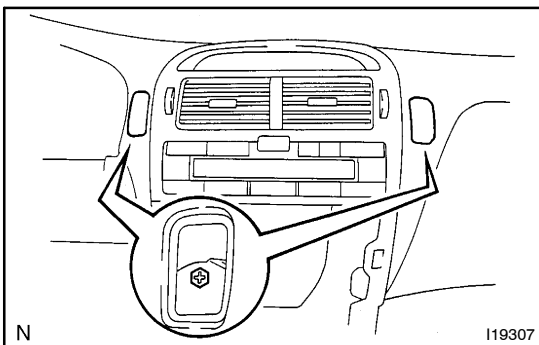

- (c) Remove the 2 bolts.

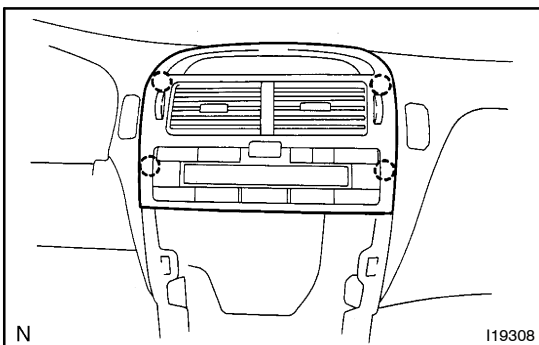

- (d) Release the 4 claws and remove the center cluster.

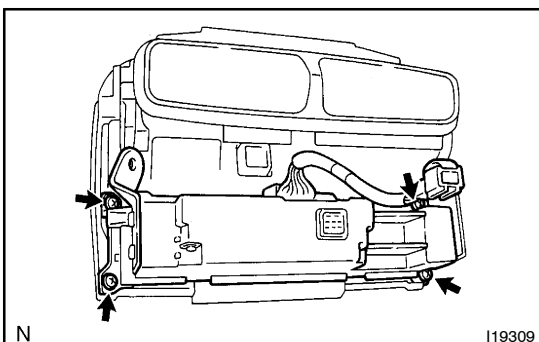

5. REMOVE A/C CONTROL ASSEMBLY

Remove the 4 screws and A/C control panel assembly.