


## REPLACEMENT

### HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION** (SEE PAGE 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (SEE PAGE 60-1)
3. **REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2** (SEE PAGE 71-6)
4. **REMOVE INSTRUMENT PANEL GARNISH SUB-ASSY RH** (SEE PAGE 71-6)
5. **REMOVE GLOVE COMPARTMENT PLATE** (SEE PAGE 71-6)
6. **REMOVE GLOVE COMPARTMENT HOLE COVER** (SEE PAGE 71-6)
7. **REMOVE GLOVE COMPARTMENT DOOR ASSY W/ INSTRUMENT PANEL AIR BAG ASSY LOWER NO.2** (SEE PAGE 71-6)

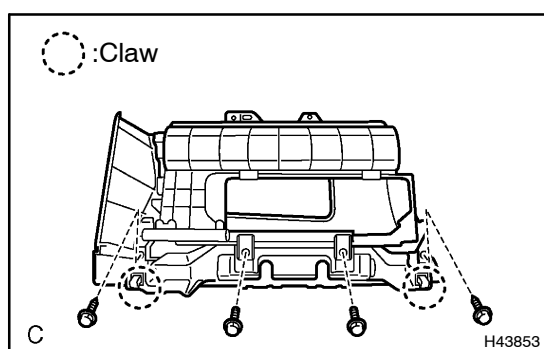

8. **REMOVE INSTRUMENT PANEL AIR BAG ASSY LOWER NO.2**
  - (a) Remove the 2 bolts and the 2 screws.
  - (b) Disengage the 2 claws and remove the instrument panel air bag Assy Lower No.2.
9. **INSPECT INSTRUMENT PANEL AIR BAG ASSY LOWER NO.2** (SEE PAGE 60-15)

### 10. **INSTALL INSTRUMENT PANEL AIR BAG ASSY LOWER NO.2**

- (a) Engage the 2 claws and install the instrument panel air bag Assy Lower No.2.
- (b) Install the instrument panel air bag Assy Lower No.2 with the 2 bolts and the 2 screws.

### 11. **CONNECT BATTERY NEGATIVE TERMINAL**

#### NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

### 12. **INSPECT SRS WARNING LIGHT** (SEE PAGE 05-954)