


## ADJUSTMENT

### 1. ADJUST LUGGAGE COMPARTMENT DOOR

- (a) For forward/rearward and left/right adjustment, loosen the bolts.
- (b) For vertical adjustment of front end of the door, increase or decrease the number of washers between the hinge and door.

**Torque: 13 N·m (135 kgf·cm, 10 ft·lbf)**

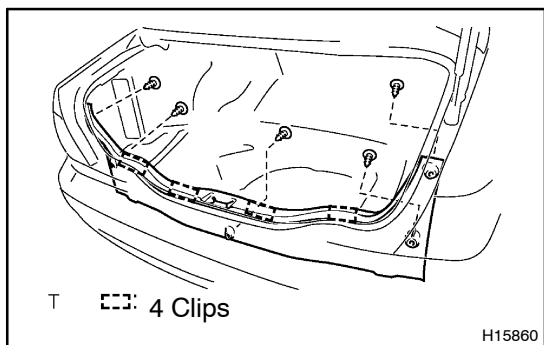


### 2. ADJUST DOOR LOCK STRIKER

- (a) Remove the 2 bolts and luggage hold belt strikers.
- (b) Remove the 5 clips.
- (c) Using a screwdriver, remove the rear floor finish plate.

**HINT:**

Tap the screwdriver tip before use.

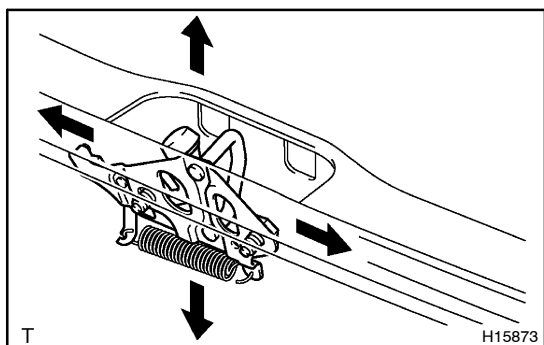

- (d) Using a brass bar and hammer, tap the striker to adjust it.

**Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)**