


## HEATER RADIATOR (Front A/C for LHD)

### INSPECTION

AC3CM-01

1. REMOVE FINISH PANEL ASSEMBLY  
(See page BO-131)
2. REMOVE BLOWER UNIT (See page AC-44)

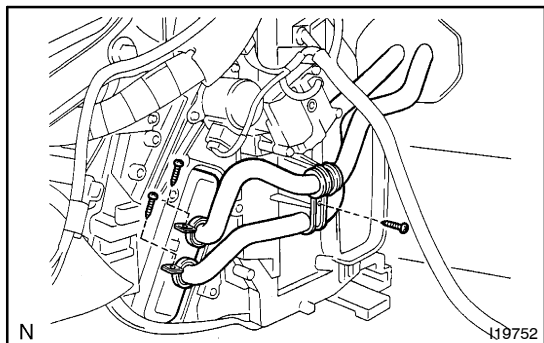

### 3. REMOVE HEATER RADIATOR

- (a) Remove the 3 screws and 3 clamps.
- (b) Pull out the 2 pipes.

#### HINT:

At the time of installation, please refer to the following item.  
Do not reuse the 2 O-rings.

### 4. CHECK HEATER RADIATOR FINS BLOCKAGE

If the fins are clogged, clean them with compressed air.

### 5. CHECK FITTINGS FOR CRACKS OR SCRATCHES

Repair as necessary.

### 6. INSTALL HEATER RADIATOR

### 7. INSTALL BLOWER UNIT

### 8. INSTALL FINISH PANEL ASSEMBLY