


EXTENSION HOUSING DISASSEMBLY

1. REMOVE OIL SEAL EXTENSION HOUSING

Using a screwdriver, remove the oil seal.

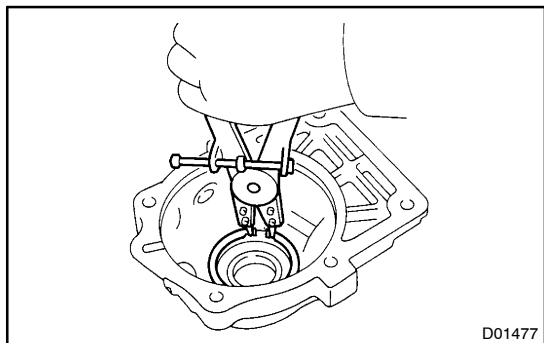

2. REMOVE EXTENSION HOUSING BEARING

- (a) Using snap ring pliers, remove the snap ring.
- (b) Remove the bearing from the extension housing.