


INSPECTION

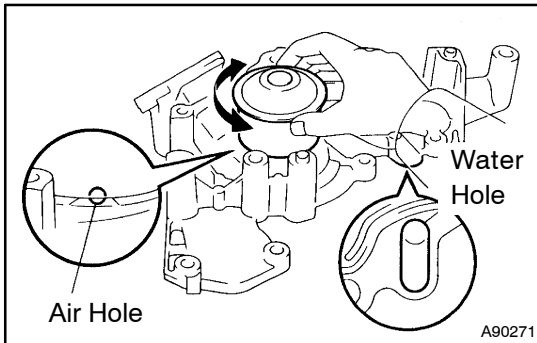

1. INSPECT WATER PUMP ASSY

- (a) Visually check the air hole and water hole for coolant leakage.

If leakage is found, replace the water pump and timing belt.

- (b) Turn the pulley, and check that the water pump bearing moves smoothly and quietly.

If it moves roughly or noisily, replace the water pump.