


## REAR DOOR LH ECU POWER SOURCE CIRCUIT


### CIRCUIT DESCRIPTION

This circuit supplies power to operate the rear left door ECU.

### WIRING DIAGRAM

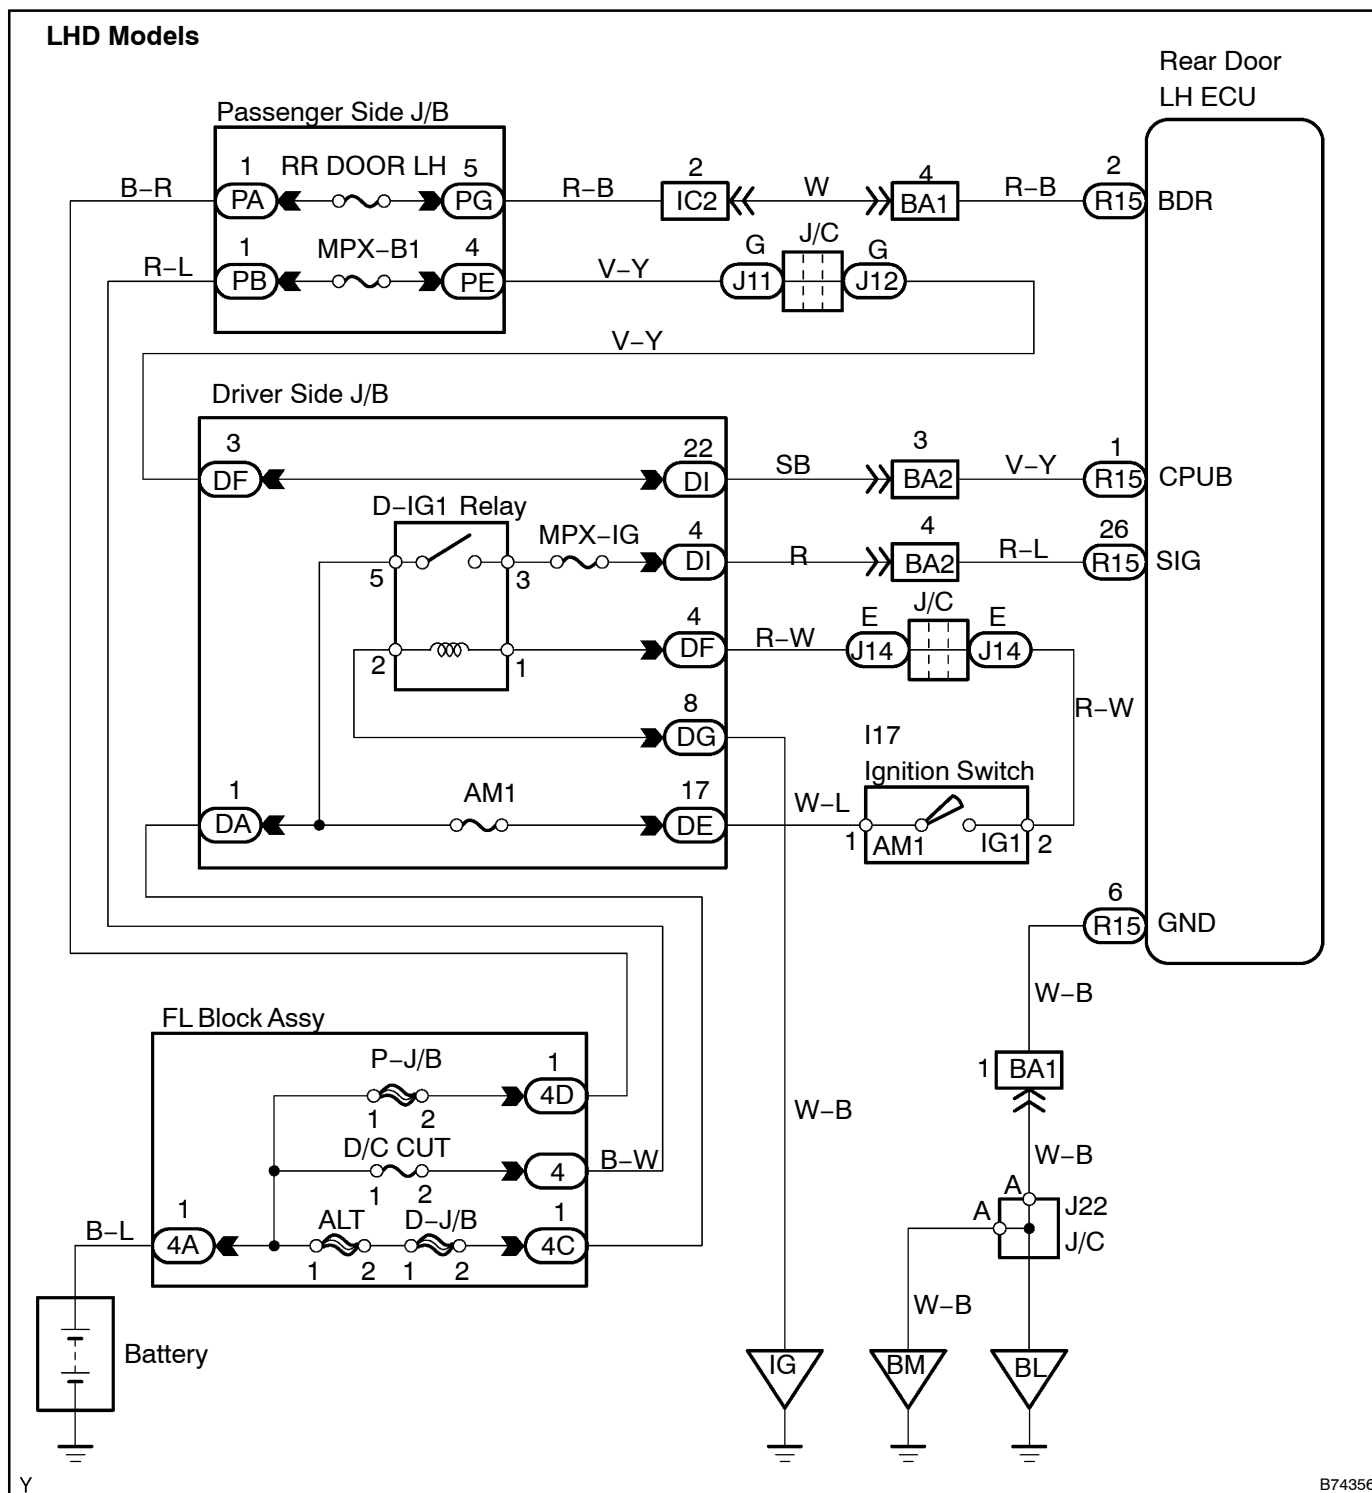

## RHD Models

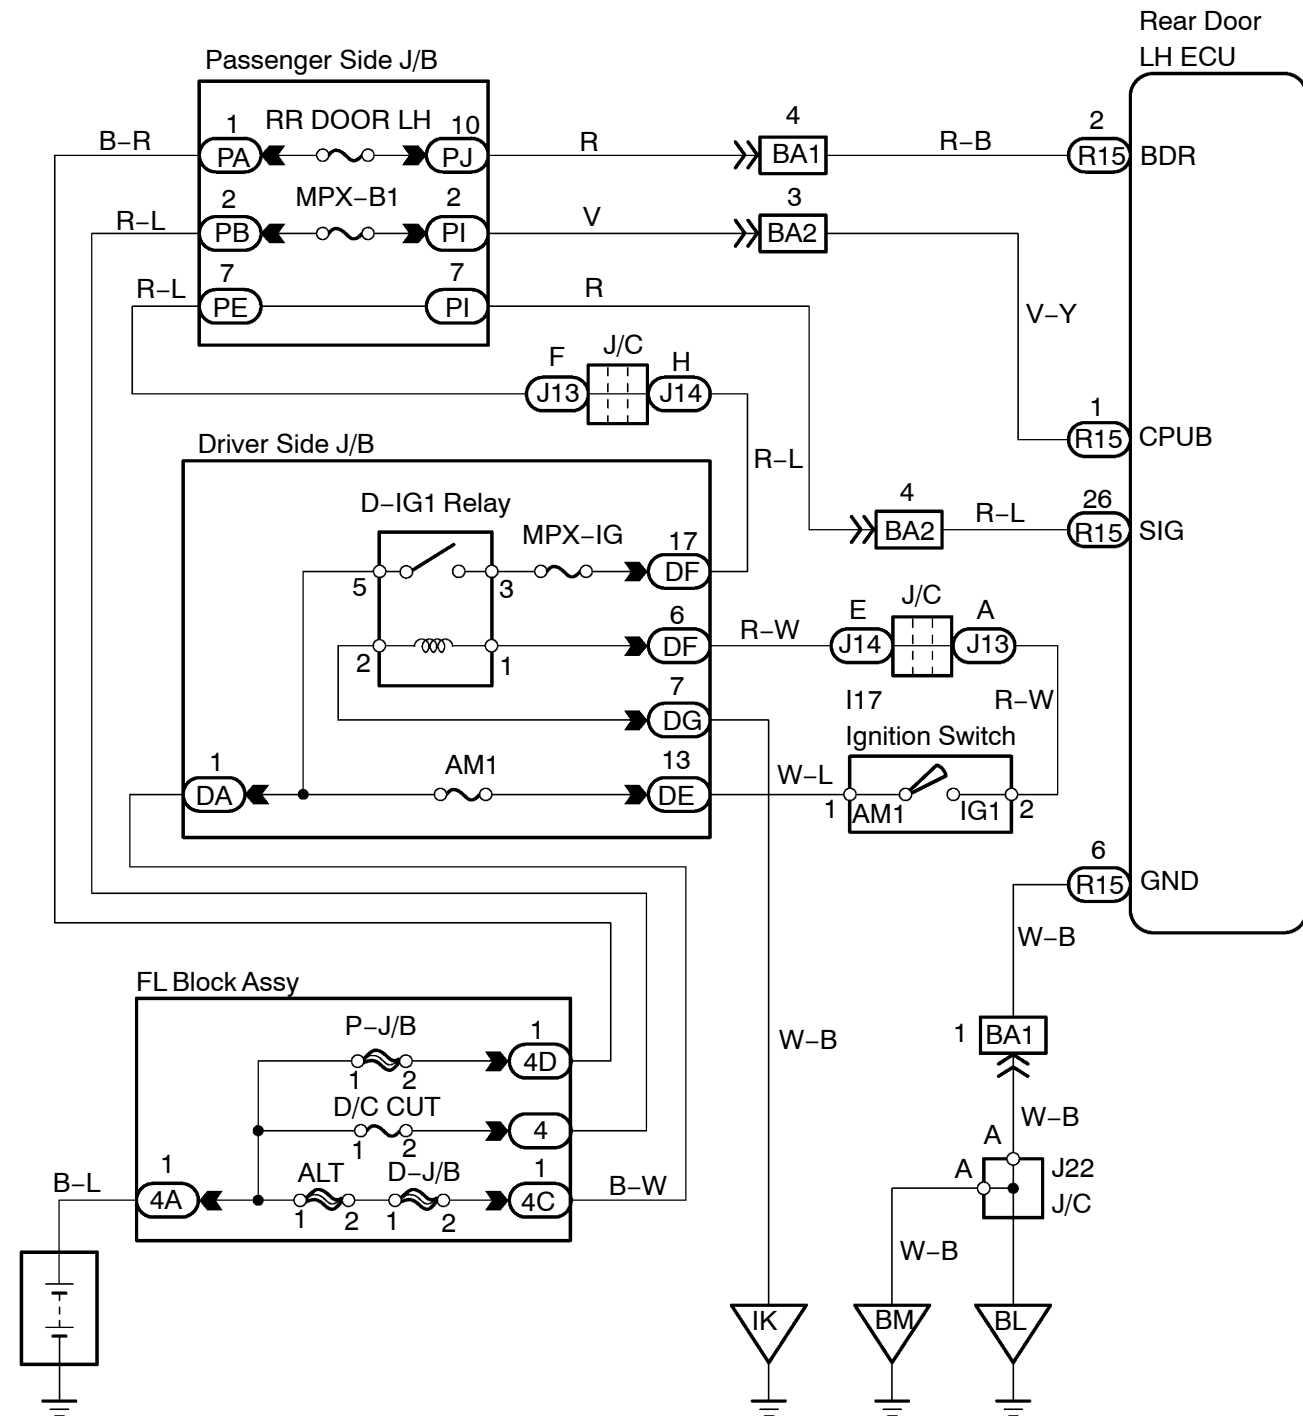

Y

B74357

INSPECTION PROCEDURE


1 INSPECT FUSE (RR DOOR LH, MPX-B1, MPX-IG, AM1, D/C CUT)

- (a) Remove the RR DOOR LH and MPX-B1 fuses from the passenger side J/B.  
(b) Remove the MPX-IG and AM1 fuses from the driver side J/B.  
(c) Remove the D/C CUT fuse from the FL block.  
(d) Measure the resistance.  
Standard: Below 1 Ω

NG REPLACE FUSE

OK

2 INSPECT RELAY (D-IG1)

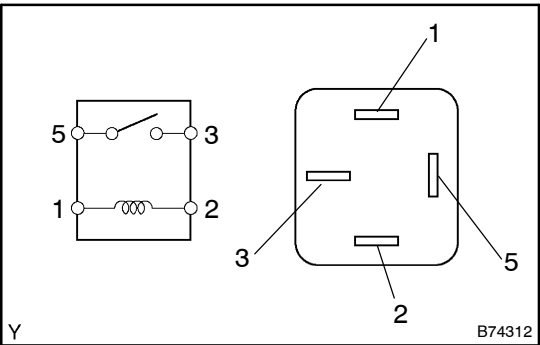


- (a) Remove the D-IG1 relay from the driver side J/B.  
(b) Check the resistance.  
Standard:

Tester Connection	Specified Condition
3 - 5	10kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

NG REPLACE RELAY

OK

3 CHECK WIRE HARNESS (REAR DOOR LH ECU - BODY GROUND)

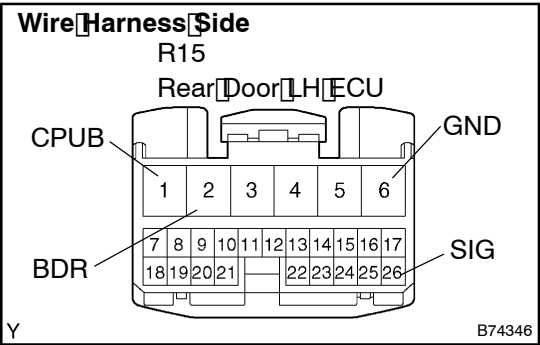

- (a) Disconnect the R15 ECU connector.  
(b) Measure the voltage and resistance of the wire harness side connector.  
Standard:

Tester Connection	Condition	Specified Condition
R15-1 (CPUB) - Body Ground	Constant	10 to 14 V
R15-2 (BDR) - Body Ground	Constant	10 to 14 V
R15-26 (SIG) - Body Ground	Ignition switch OFF → ON	0 V → 10 to 14 V
R15-6 (GND) - Body Ground	Constant	Below 1 Ω

NG REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (see page 05-2340)