



## DISASSEMBLY

### 1. REMOVE COOLING FAN COMPUTER

- (a) Disconnect the connectors.
- (b) Remove the 3 screws and computer.

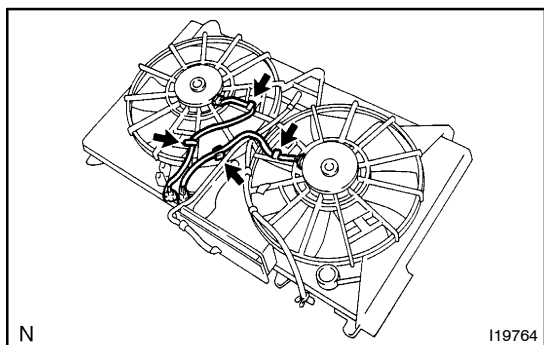

- (c) Disconnect the connectors.

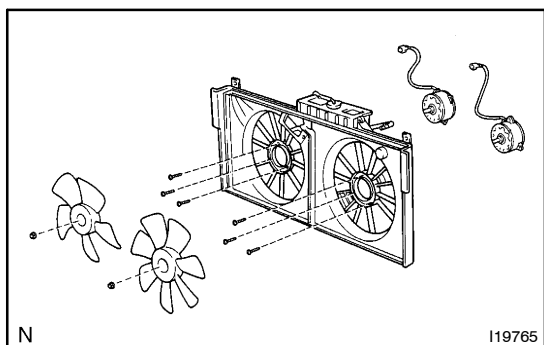

### 2. REMOVE FAN AND MOTOR

- (a) Remove the 2 nuts and 2 fans.
- (b) Remove the 6 screws and 2 motors.