


DTC CHECK/CLEAR

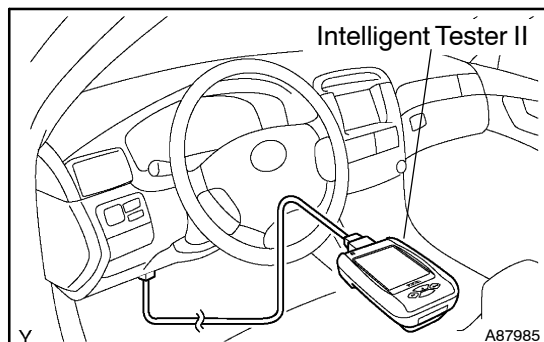

1. CHECK DTC

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch ON.
- (c) Read the DTCs by following the directions on the tester's screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.

2. CLEAR DTC

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch ON.
- (c) Erase the DTCs by following the directions on the tester's screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.