


## REMOVAL

### 1. REMOVE FRONT FENDER WHEEL OPENING MOULDING

Remove the 4 screws and front fender wheel opening moulding.

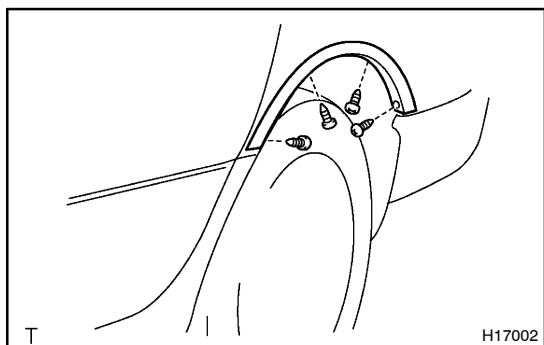

### 2. REMOVE QUARTER WHEEL OPENING MOULDING

Remove the 4 screws and quarter wheel opening moulding.