


## DISASSEMBLY

### 1. REMOVE PRESSURE PLATE

- (a) Using SST and a socket wrench, remove the shaft bolt.


SST 07112-76060

**Torque: 13.2 N·m (135 kgf·cm, 9 ft·lbf)**

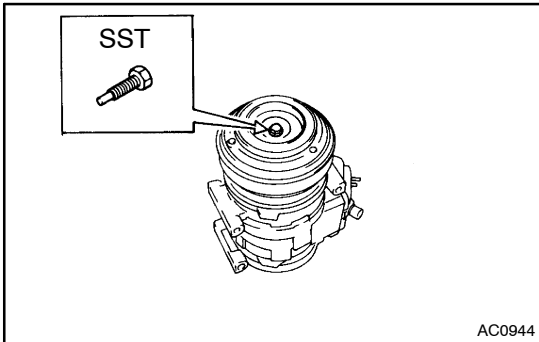


- (b) Install SST on the pressure plate.

SST 07112-66040

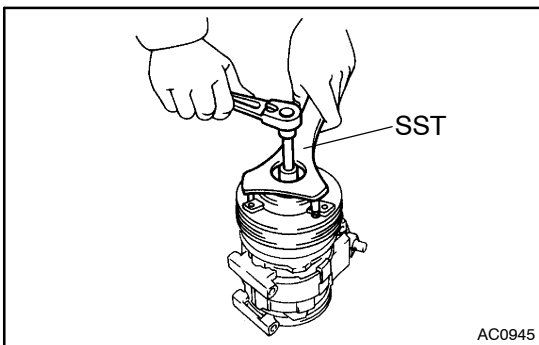


- (c) Using SST and socket wrench, remove the pressure plate.

SST 07112-66040, 07112-76060

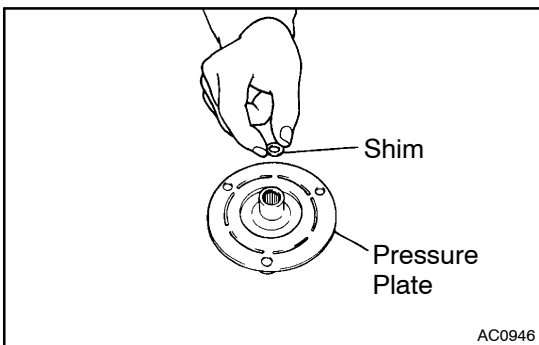


- (d) Remove the shims from the pressure plate.

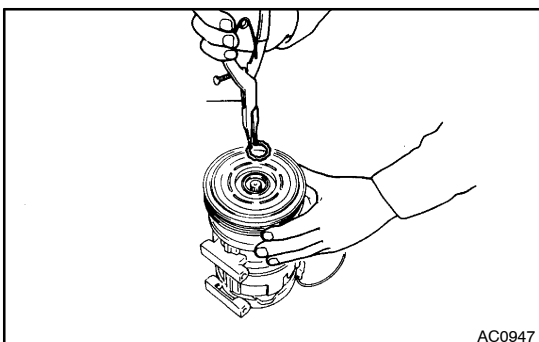

### 2. REMOVE ROTOR


- (a) Remove the snap ring.

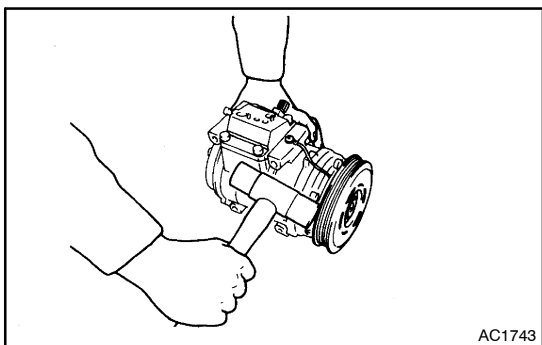

(b) Using a plastic hammer, tap the rotor off the shaft.


**NOTICE:**

**Be careful not to damage the pulley when tapping on the rotor.**

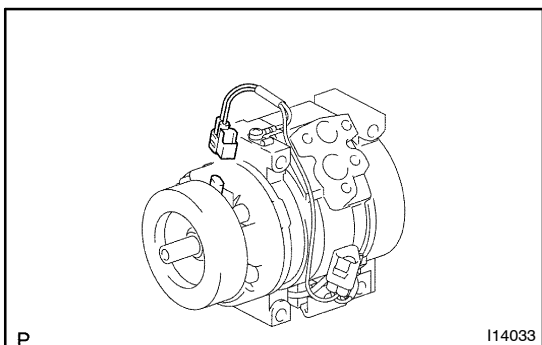


**3. REMOVE STATOR**

(a) Disconnect the connector from the stator.

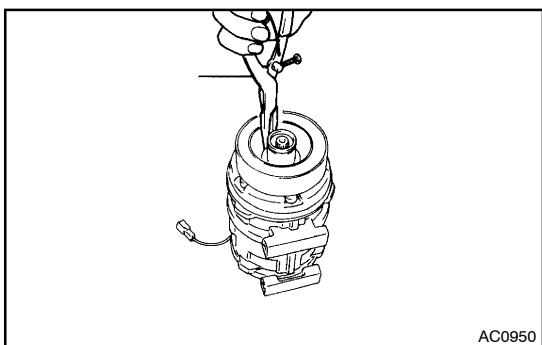

(b) Remove the snap ring.

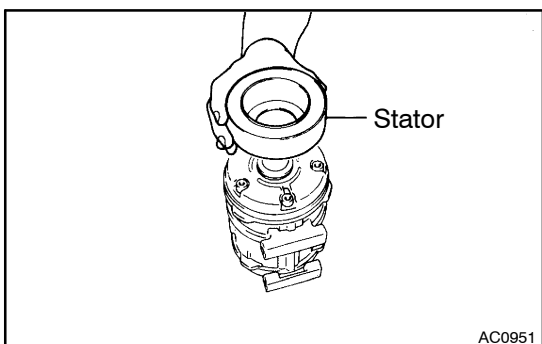

(c) Remove the stator.