


## AIR MIX SERVOMOTOR INSPECTION

### 1. Driver side:

#### REMOVE AIR MIX SERVOMOTOR

- (a) Remove the No. 1 under cover.
- (b) Remove the 2 air ducts.
- (c) Disconnect the connector.
- (d) Remove the 3 screws and servomotor.

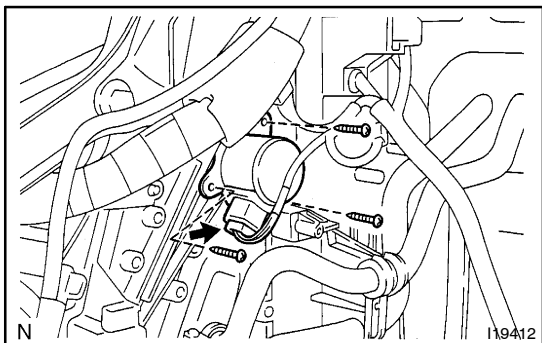

### 2. Passenger side:

#### REMOVE AIR MIX SERVOMOTOR

- (a) Remove the finish panel assembly (See page BO-131).
- (b) Remove the blower unit (See page AC-44).
- (c) LHD model:  
Remove the water valve control servomotor.
  - (1) Disconnect the connector.
  - (2) Disconnect the control cable.
  - (3) Remove the 3 screws and servomotor.
- (d) Disconnect the connector.
- (e) Remove the 3 screws and servomotor.

### 3. INSPECT AIR MIX DAMPER CONTROL SERVOMOTOR CIRCUIT (See page DI-1842)

### 4. INSTALL AIR MIX SERVOMOTOR