

REMOVAL

NOTICE:


Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

HINT:

For step 1 to 13, refer to page BO-131.

1. REMOVE NO. 2 UNDER COVER
2. REMOVE NO. 2 GARNISH
3. REMOVE FINISH PANEL ASSEMBLY
4. REMOVE NO. 1 UNDER COVER
5. REMOVE NO. 1 SAFETY PAD
6. REMOVE CLUSTER FINISH PANEL
7. REMOVE REAR CONSOLE ARMREST
8. REMOVE LOWER CENTER FINISH PANEL
9. REMOVE LOWER CLUSTER FINISH PANEL
10. REMOVE CLUSTER FINISH END PANEL
11. REMOVE CENTER LOWER CLUSTER FINISH PANEL
12. REMOVE CLUSTER FINISH PANEL
13. REMOVE CONSOLE BOX

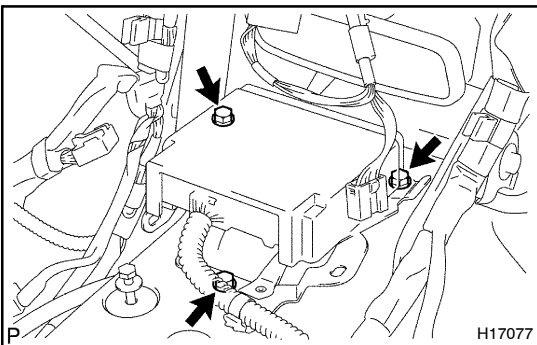

14. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the airbag sensor connectors.

NOTICE:

Disconnect the connectors with the airbag sensor assembly installed.

- (b) Remove the airbag wire harness from the airbag sensor bracket.
- (c) Remove the 3 bolts and airbag sensor assembly.