


Position of Parts in Seat

[LHD : Rear Seat]

*1 : w/ Rear Power Seat
*2 : w/o Rear Power Seat

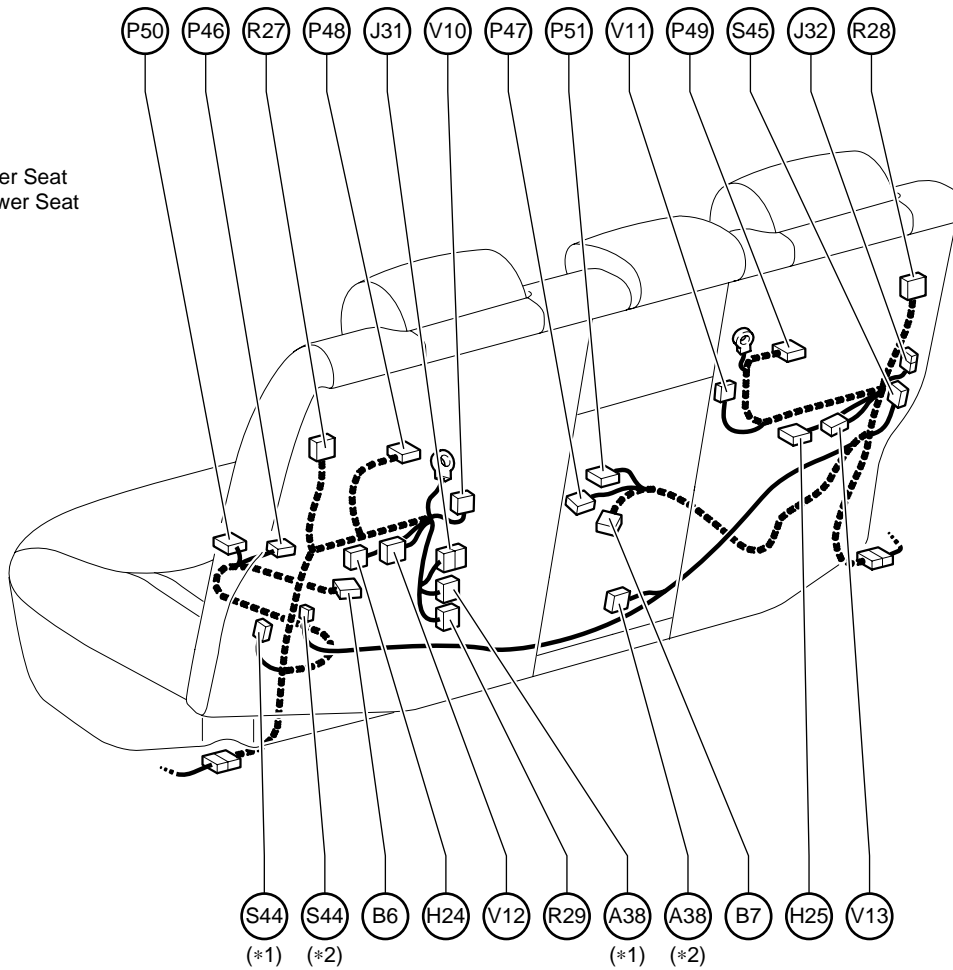

A38 Audio and Rear A/C Control SW

B 6 Buckle SW Rear LH

B 7 Buckle SW Rear RH

H24 Head Rest Limit SW Rear LH

H25 Head Rest Limit SW Rear RH

J 31 Junction Connector

J 32 Junction Connector

P46 Power Seat Motor
(Rear Passenger's LH Seat Slide Control)

P47 Power Seat Motor
(Rear Passenger's RH Seat Slide Control)

P48 Power Seat Motor and Position Sensor
(Rear Passenger's LH Seat Head Rest Top and Bottom Control)

P49 Power Seat Motor and Position Sensor
(Rear Passenger's RH Seat Head Rest Top and Bottom Control)

P50 Power Seat Position Sensor
(Rear Passenger's LH Seat Slide Control)

P51 Power Seat Position Sensor
(Rear Passenger's RH Seat Slide Control)

R27 Rear LH Seat ECU

R28 Rear RH Seat ECU

R29 Rear Seat Control SW

S44 Seat Heater Rear LH

S45 Seat Heater Rear RH

V10 Vibration Seat ECU LH

V11 Vibration Seat ECU RH

V12 Vibrator LH

V13 Vibrator RH