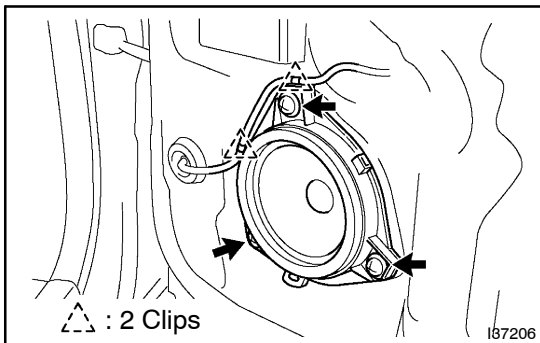


FRONT NO.1 SPEAKER ASSY REPLACEMENT

67147-01

HINT:

- COMPONENTS: [SEE PAGE 75-13.](#)
 - LOCATION: [SEE PAGE 67-2.](#)
 - Installation is in the reverse order of removal.
 - The procedure for the left side is the same as that for the right side. The procedure for right side is shown below.
1. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY** [\(SEE PAGE 75-17\)](#)
 2. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL RH** [\(SEE PAGE 75-17\)](#)
 3. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSY RH** [\(SEE PAGE 75-17\)](#)

**4. REMOVE FRONT NO.1 SPEAKER ASSY**

- (a) Disconnect the connector.
- (b) Disengage the 2 clips.
- (c) Remove the 3 screws and front No.1 speaker assy.