

INSPECTION

1. INSPECT REAR BLOWER MOTOR CIRCUIT (SEE PAGE 05-919)
2. EXHAUST DAMPER CONTROL SERVOMOTOR CIRCUIT (SEE PAGE 05-925)
3. INSPECT REAR MAGNETIC VALVE CIRCUIT (SEE PAGE 05-928)
4. INSPECT SMOKE SENSOR CIRCUIT (SEE PAGE 05-931)
5. INSPECT EVAPORATOR SUB-ASSY (REAR)

(a) Check the evaporator sub-assy (rear) fins for blockage.


If the fins are clogged, clean them with compressed air.

NOTICE:

Never use water to clean the evaporator sub-assy (rear).

(b) Check the fitting for cracks or scratches.

If necessary, repair or replace.

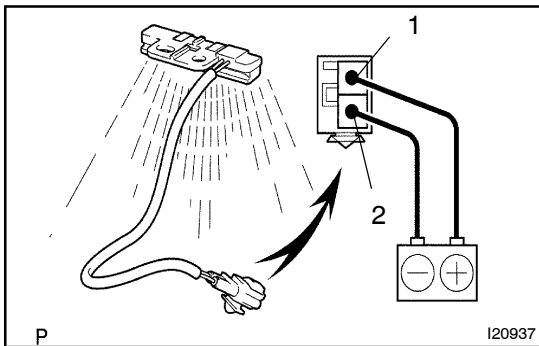

6. INSPECT COOLING BOX LAMP SUB-ASSY

- (a) Connect positive (+) lead to terminal 1 and negative (-) lead to terminal 2.
 - (b) Check that the cooling box lamp sub-assy comes on.
- If cooling box light does not come on, replace the cooling box lamp sub-assy.