

AIR CONDITIONING SYSTEM


0513A-01

PRECAUTION

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See page
Power Window Control System	01-20
Front Power Seat Control System	01-20
Back Guide Monitor System	01-20

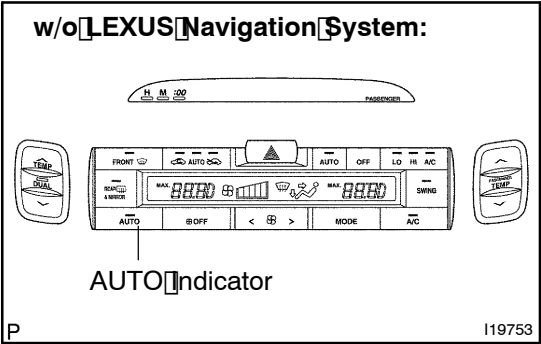

1. RESTRICTION OF STEP MOTORS CONTINUOUS OPERATION

If the step motor is continuously operating for many hours, the step motor is forced to stop and the "AUTO" indicator blinks. In this case, the step motor automatically restores after cooling for approximately 7 minutes.

