

D19
Door Unlock Switch
(Luggage Compartment Door Open Switch)

W-B

2 1

L*1, GR*2

8 L13 BDCY

W-B

J24 J/C A

BM

Luggage Room J/B Assy

LB 3


LA 5

*1: LHD
*2: RHD

Luggage Room J/B ECU

INSPECTION PROCEDURE

1 INSPECT LUGGAGE COMPARTMENT DOOR STRIKER ASSY (DOOR UNLOCK SWITCH)

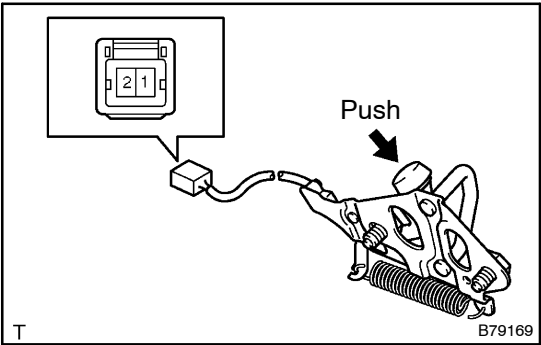

(a) Measure the resistance between the terminals of the connector when the switch is operated.


Standard:

Tester Connection	Switch Condition	Specified Condition
1 - 2	Pushed	Below 1 Ω
1 - 2	Not pushed	10 kΩ or higher

NG REPLACE LUGGAGE COMPARTMENT DOOR STRIKER ASSY

OK

2 CHECK WIRE HARNESS (LUGGAGE COMPARTMENT DOOR STRIKER ASSY - LUGGAGE ROOM/B ECU AND BODY GROUND)

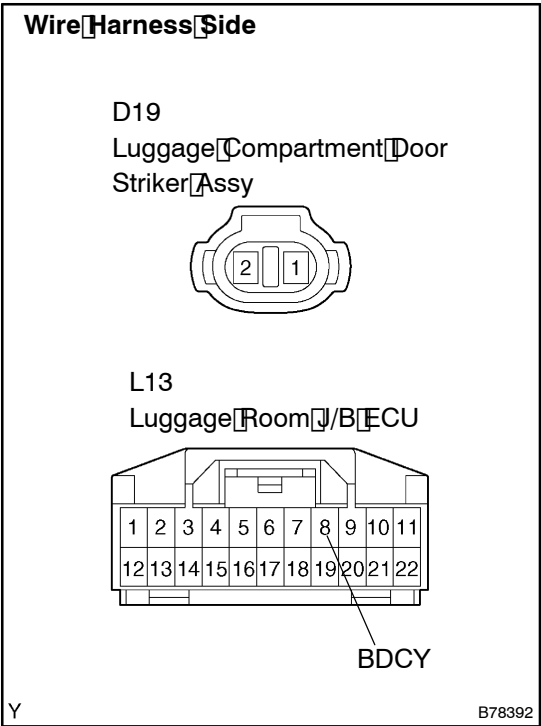

(a) Disconnect D19 striker connector.
(b) Disconnect L13 ECU connector.
(c) Measure the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
D19-1 - L13-8 (BDCY)	Below 1 Ω
D19-2 - Body Ground	Below 1 Ω

NG REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (See page 05-2782)