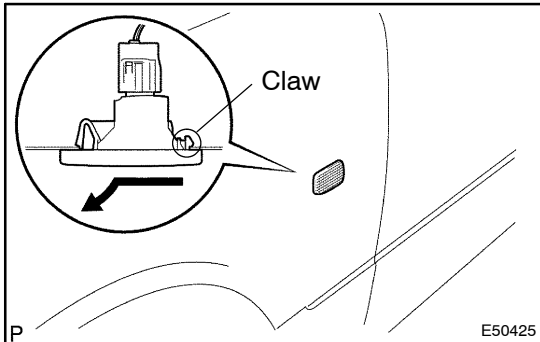


SIDE TURN SIGNAL LAMP LENS REPLACEMENT

6511E-01

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Install is in the reverse order of removal.

**1. REMOVE SIDE TURN SIGNAL LAMP ASSY**

- (a) Pull the side turn signal lamp assy as shown in the illustration, and release the claw.
- (b) Disconnect the connector and the side turn signal lamp assy.

2. REMOVE SIDE TURN SIGNAL LAMP BULB

- (a) Remove the side turn signal lamp bulb and the side turn signal lamp socket plug.
- (b) Remove the side turn signal lamp bulb from the side turn signal lamp socket plug.

3. REMOVE SIDE TURN SIGNAL LAMP SOCKET AND WIRE**4. REMOVE SIDE TURN SIGNAL LAMP LENS LH**