


FRONT AXLE LH HUB BOLT REPLACEMENT

300NO-01

HINT:

- COMPONENTS: [SEE PAGE 30-4](#)
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


1. REMOVE FRONT WHEEL LH
2. SEPARATE FRONT DISC BRAKE CALIPER ASSY LH ([SEE PAGE 30-19](#))
3. REMOVE FRONT DISC ([SEE PAGE 32-39](#))

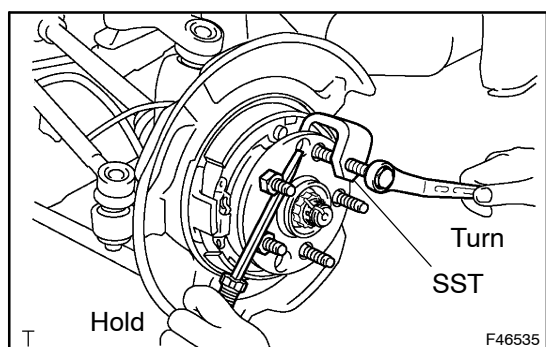

4. REMOVE FRONT AXLE LH HUB BOLT

- (a) Using SST and a brass bar or an equivalent to hold, remove the hub bolt.

SST 09628-10011

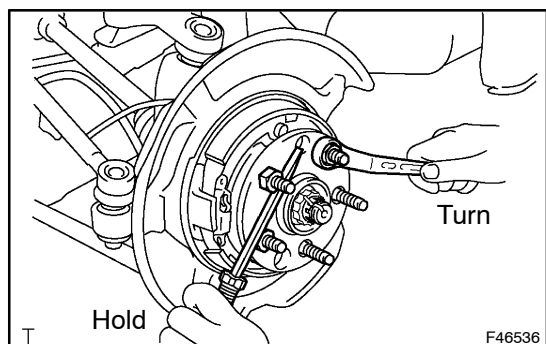

5. INSTALL FRONT AXLE LH HUB BOLT

- (a) Install a washer and nut to the bolt, as shown in the illustration.
- (b) Using a brass bar or an equivalent to hold, turn the wheel nut to pull the hub bolt until the underside of the hub bolt head touches the axle hub.

6. INSTALL FRONT DISC ([SEE PAGE 32-39](#))
7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH ([SEE PAGE 30-19](#))
8. INSTALL FRONT WHEEL LH
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)