


SUSPENSION CONTROL ECU


REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER (LHD) (SEE PAGE 71-6)
3. REMOVE INSTRUMENT CLUSTER FINISH PANEL END (LHD) (SEE PAGE 71-6)
4. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1 (SEE PAGE 71-6)
5. REMOVE COIN BOX ASSY (LHD) (SEE PAGE 71-6)
6. REMOVE OUTER MIRROR SWITCH ASSY (LHD) (SEE PAGE 71-6)
7. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY (SEE PAGE 71-6)
8. REMOVE INSTRUMENT PANEL AIR BAG ASSY LOWER NO.1 (LHD) (SEE PAGE 60-58)

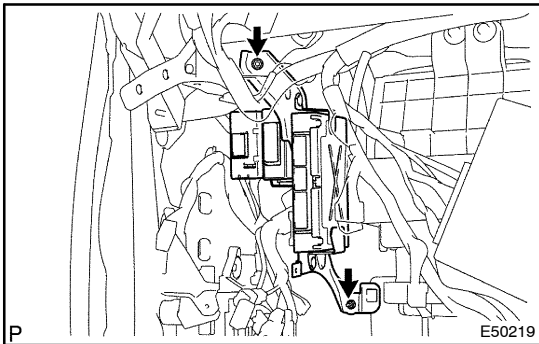

9. REMOVE SUSPENSION CONTROL ECU

- (a) Disconnect the connectors.
- (b) Remove the 2 nuts and suspension control ECU with bracket.
- (c) Remove the 2 nuts and suspension control ECU from the bracket.

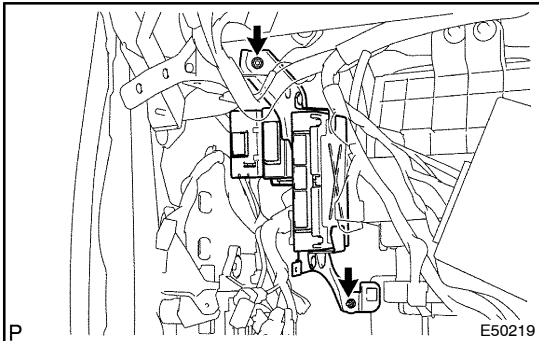

10. INSTALL SUSPENSION CONTROL ECU

- (a) Install the suspension control ECU to the bracket with the 2 nuts.
Torque: 5.5 N·m (56 kgf·cm, 48 in. lbf)
- (b) Install the suspension control ECU with bracket with the 2 nuts.
Torque: 5.5 N·m (56 kgf·cm, 48 in. lbf)
- (c) Connect the connectors.

11. INSTALL INSTRUMENT PANEL AIR BAG ASSY LOWER NO.1 (LHD) (SEE PAGE 60-58)
12. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY (SEE PAGE 71-6)
13. INSTALL OUTER MIRROR SWITCH ASSY (LHD) (SEE PAGE 71-6)
14. INSTALL COIN BOX ASSY (LHD) (SEE PAGE 71-6)
15. INSTALL INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1 (SEE PAGE 71-6)
16. INSTALL INSTRUMENT CLUSTER FINISH PANEL END (LHD) (SEE PAGE 71-6)
17. INSTALL INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER (LHD) (SEE PAGE 71-6)
18. INSPECT SRS WARNING LIGHT (SEE PAGE 05-954)
19. CONNECT BATTERY NEGATIVE TERMINAL