

# CHARGING SYSTEM

## LOCATION

190UV-01

### LHD

#### FL Block Assy

- R/B H-fuse
- D-J/B H-fuse
- ALT H-fuse
- ALT-S Fuse
- DC CUT Fuse


#### Passenger Side J/B

- DOME Fuse
- MPX-B2 Fuse

#### Ignition Switch Assy

#### Combination Meter

- Charge Warning Lamp

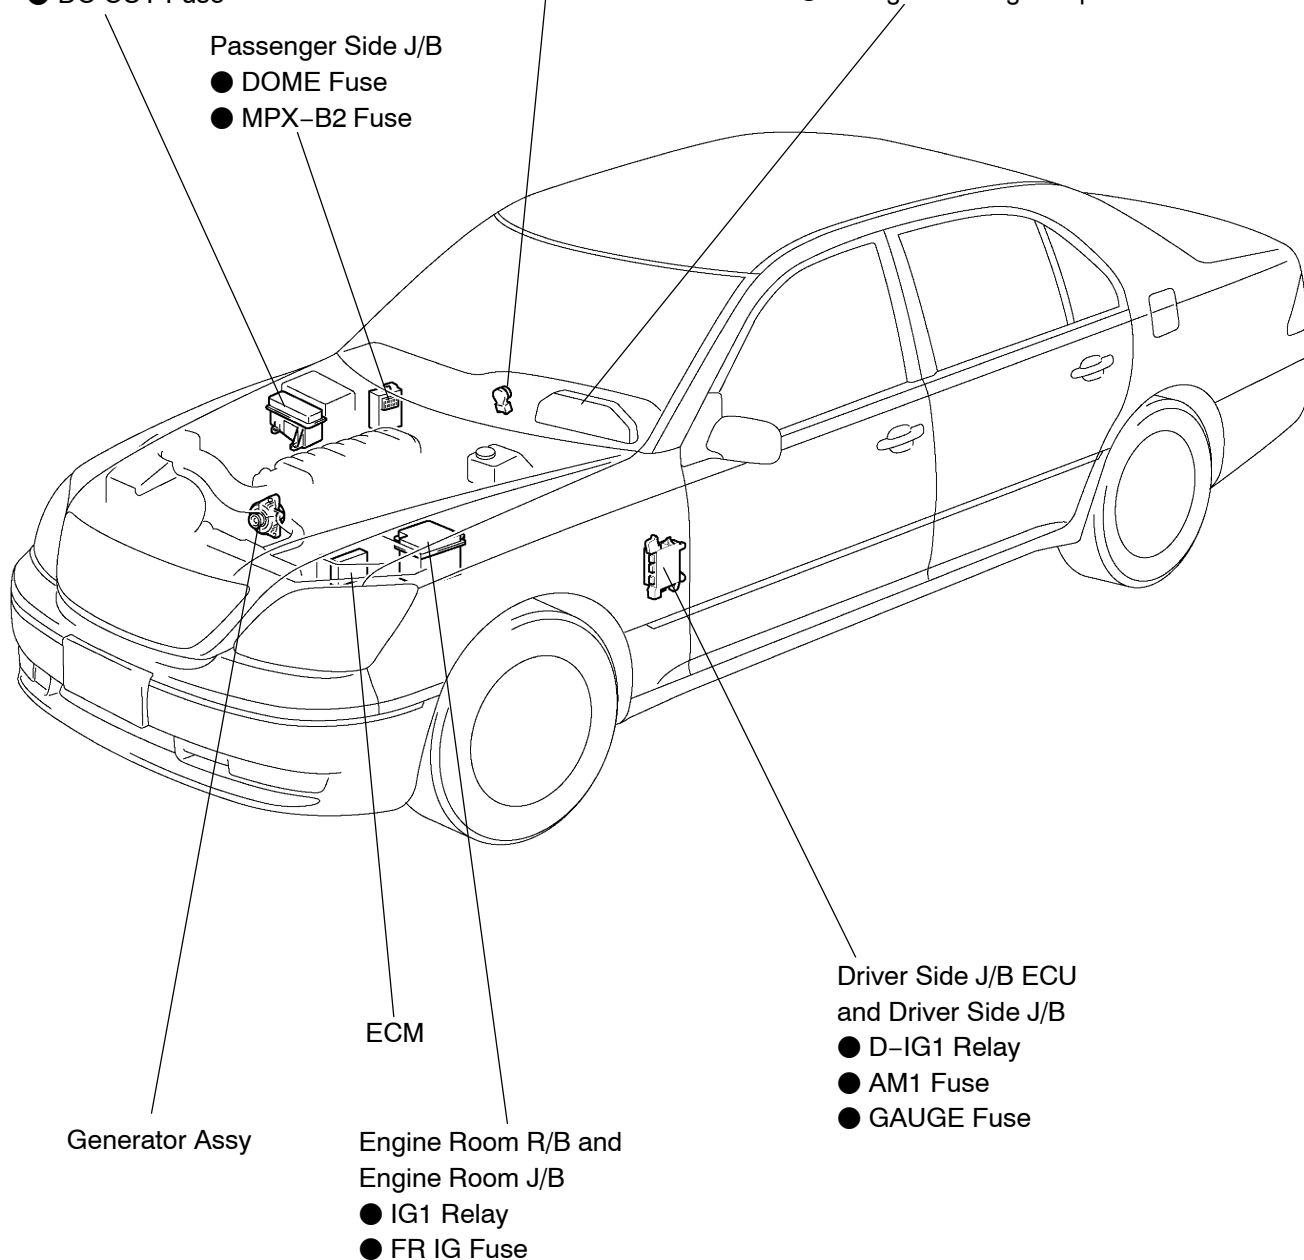

#### Generator Assy

#### ECM

#### Engine Room R/B and Engine Room J/B

- IG1 Relay
- FR IG Fuse

#### Driver Side J/B ECU and Driver Side J/B

- D-IG1 Relay
- AM1 Fuse
- GAUGE Fuse

RHD

