


POWER SOURCE CIRCUIT (STEREO COMPONENT TUNER)

CIRCUIT DESCRIPTION


This circuit provides power to the stereo component tuner.

WIRING DIAGRAM

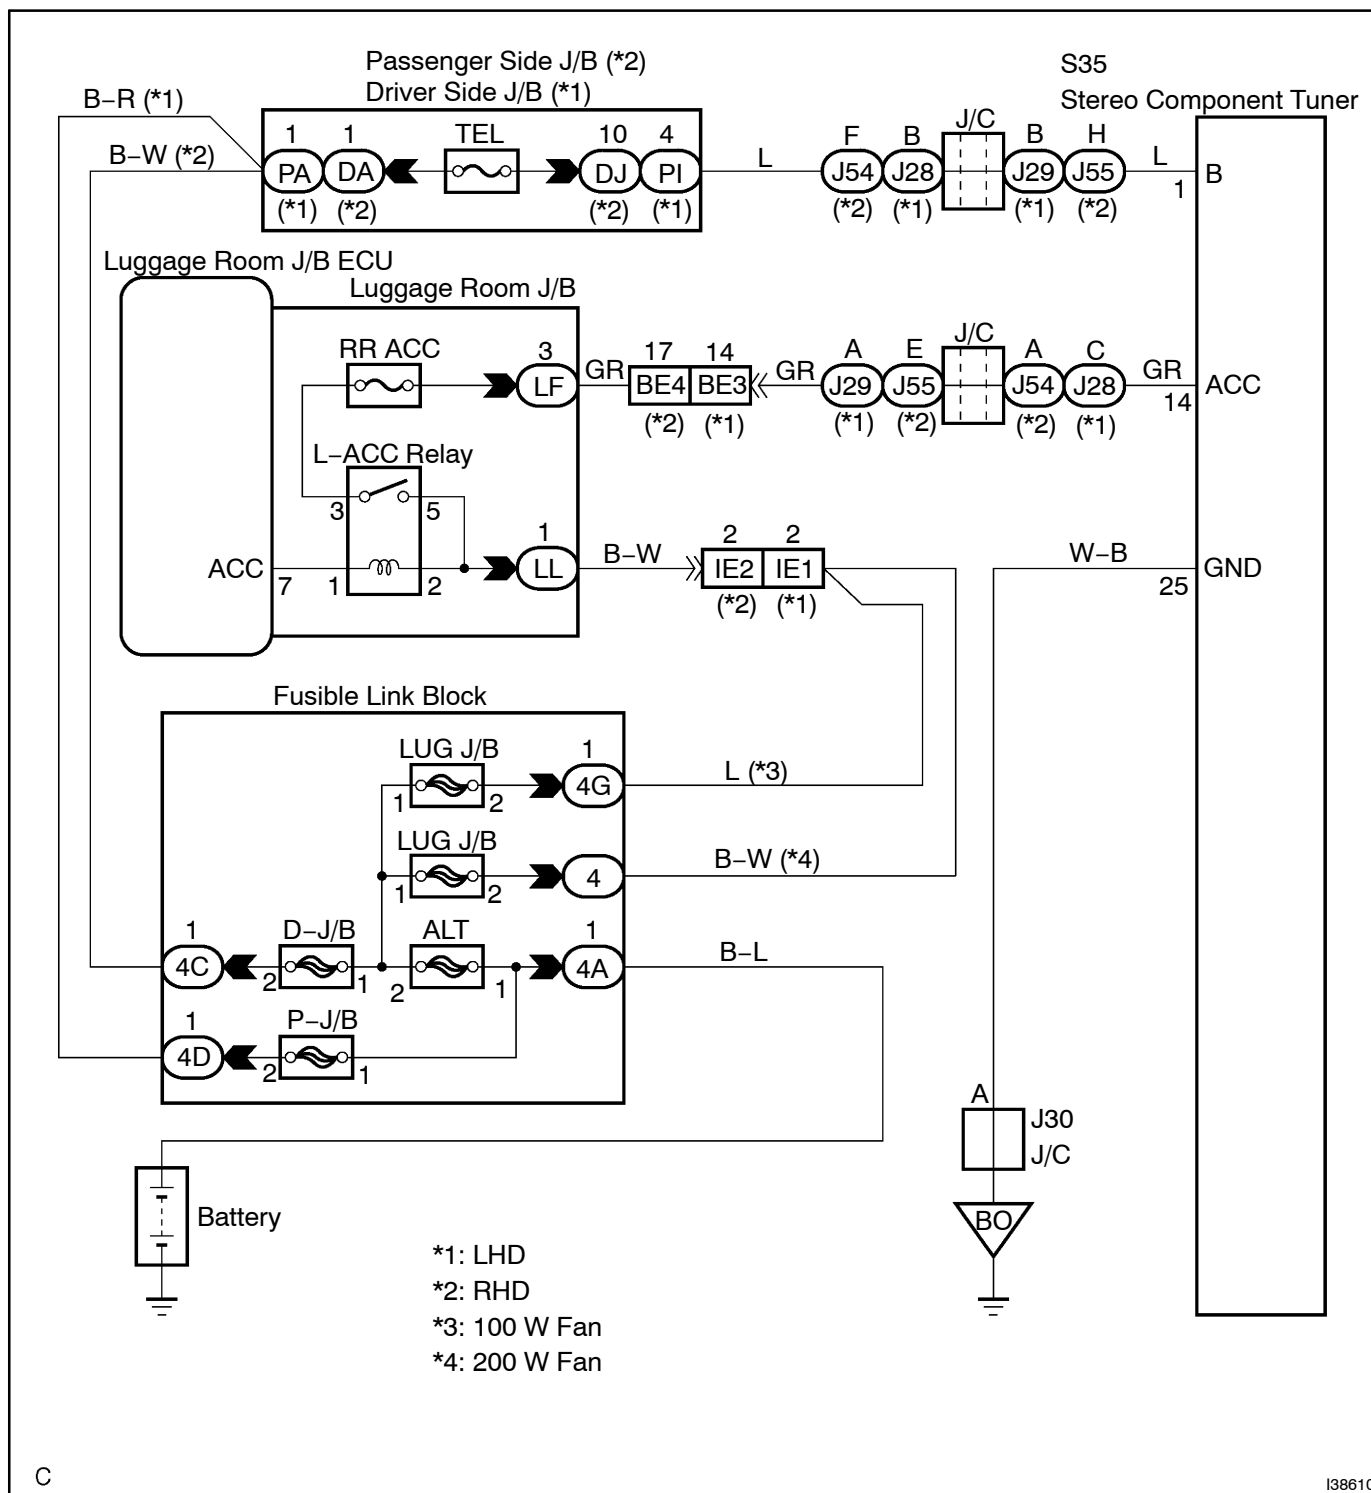

INSPECTION PROCEDURE

1 INSPECT STEREO COMPONENT TUNER (B, ACC, GND)

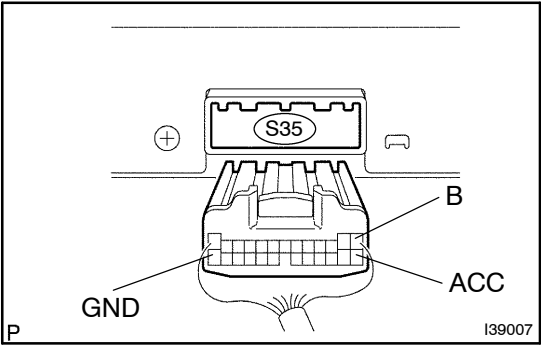

- (a) Disconnect the stereo component tuner connector S35.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND - Body ground	Always	Below 1 Ω

- (c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
B - GND	Always	10 to 14 V
ACC - GND	Ignition SW ACC	10 to 14 V

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1788)