


POWER POINT SOCKET ASSY REPLACEMENT

6714P-01

HINT:

- COMPONENTS: [SEE PAGE 71-1](#).
 - Installation is in the reverse order of removal.
1. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER ([SEE PAGE 71-6](#))
 2. REMOVE CONSOLE PANEL SUB-ASSY UPPER ([SEE PAGE 71-6](#))

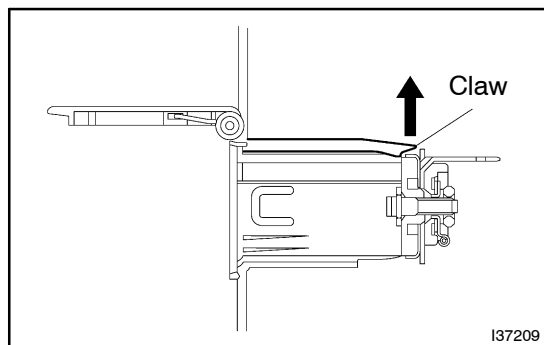

3. REMOVE POWER POINT SOCKET ASSY

- (a) Pressing the claw of the power point socket assy in the direction indicated by the arrow, push the power point socket assy toward the inside of the chamber and remove it.

4. REMOVE POWER POINT SOCKET COVER

5. INSTALL POWER POINT SOCKET ASSY

- (a) Align the claw of the power point socket assy with the cutout of the power point cover and fully push it to install.