


SYSTEM DIAGRAM

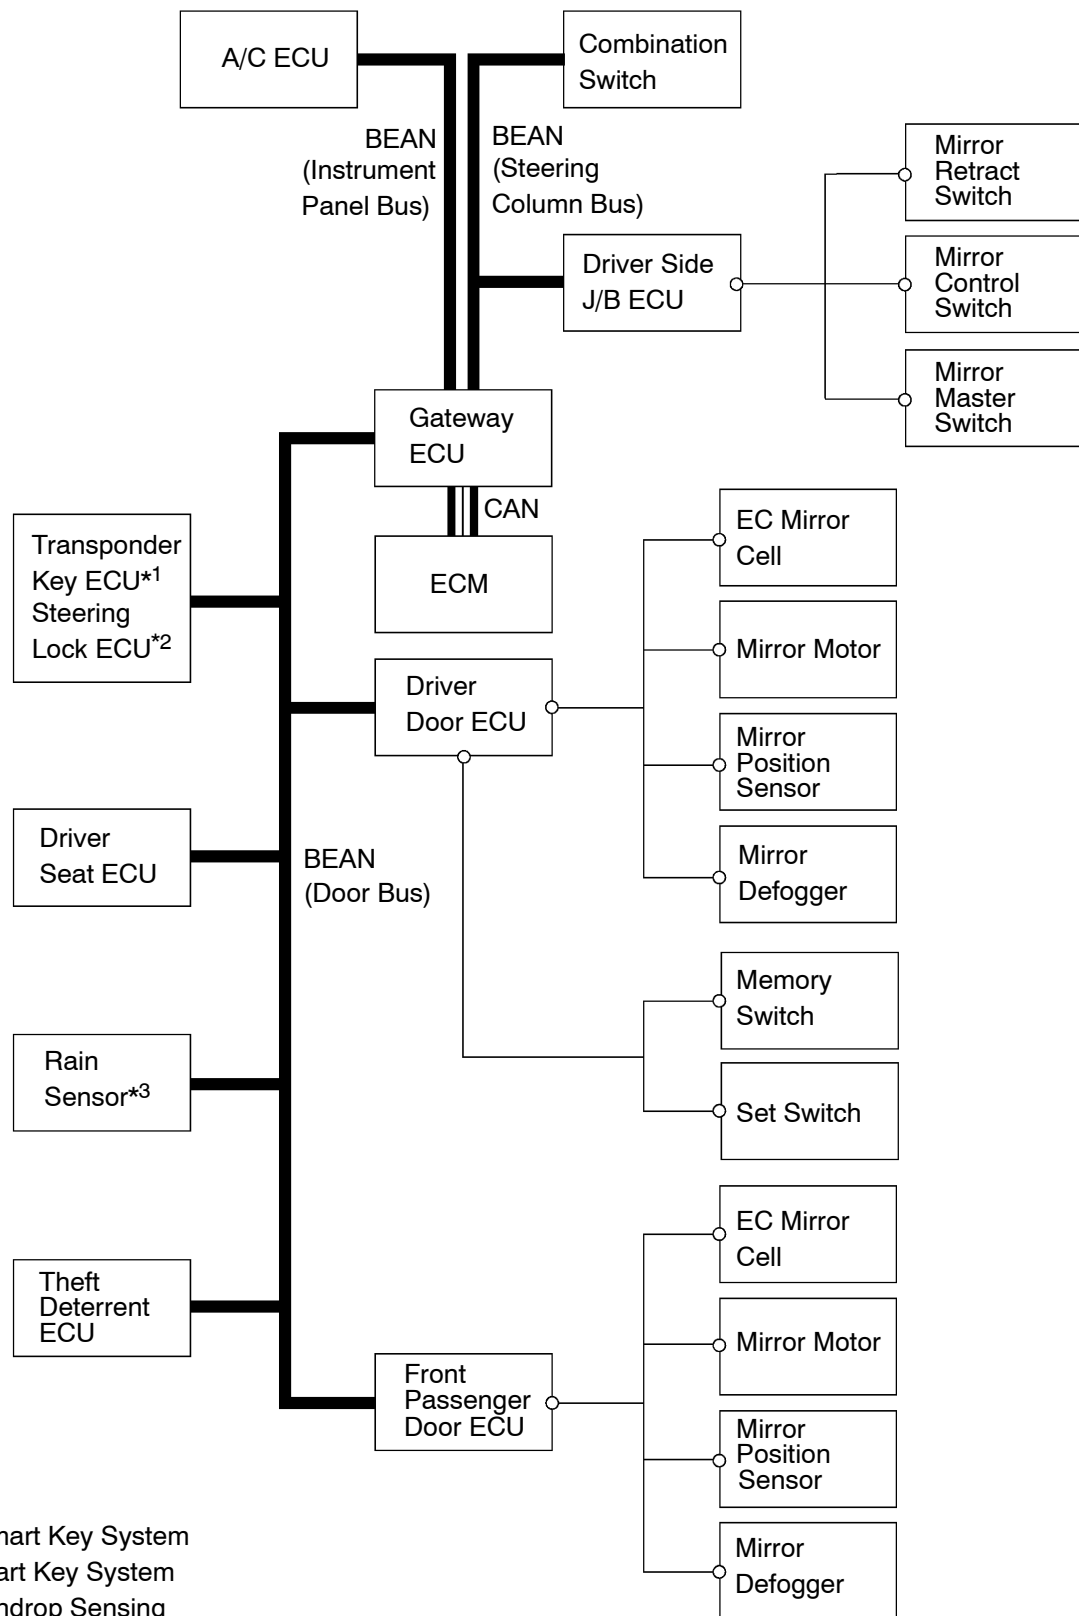

Communication Table

Sender	Receiver	Signal	Line
Driver Door ECU	Passenger Door ECU	Driver's side mirror reverse-linked operation signal	BEAN
Driver Door ECU	Driver Seat ECU	Driver's side mirror position signal Memory switch signal	BEAN BEAN
Passenger Door ECU	Driver Door ECU	Passenger's side mirror reverse-linked operation signal	BEAN
Passenger Door ECU	Driver Seat ECU	Passenger's side mirror position signal	BEAN
Driver Seat ECU	Driver Door ECU	Memory save command Memory call command Driver's side mirror memory position signal	BEAN BEAN BEAN
Driver Seat ECU	Passenger Door ECU	Memory save command Memory call command Passenger's side mirror memory position signal	BEAN BEAN BEAN
Driver Seat ECU	Driver Side J/B ECU	Memory save command Memory call command	BEAN BEAN
Rain Sensor*3	Driver Door ECU	LO signal operation signal Manual INT operation request signal Rain sensor information signal	BEAN BEAN BEAN
Rain Sensor*3	Passenger Door ECU	LO signal operation signal Manual INT operation request signal Rain sensor information signal	BEAN BEAN BEAN
Driver Side J/B ECU	Driver Door ECU	Mirror adjustment signal Mirror retract switch signal Mirror return switch signal	BEAN BEAN BEAN
Driver Side J/B ECU	Passenger Door ECU	Mirror adjustment signal Mirror retract switch signal Mirror return switch signal	BEAN BEAN BEAN
Combination Switch	Driver Door ECU	Wiper & washer switch signal	BEAN
Combination Switch	Passenger Door ECU	Wiper & washer switch signal	BEAN
A/C ECU	Driver Side J/B ECU	Rear def. relay activation signal	BEAN
Transponder Key ECU*1 Steering Lock ECU*2	Driver Door ECU	Ignition switch signal	BEAN
Transponder Key ECU*1 Steering Lock ECU*2	Passenger Door ECU	Ignition switch signal	BEAN
Theft Deterrent ECU	Driver Door ECU	ACC switch signal	BEAN
Theft Deterrent ECU	Passenger Door ECU	ACC switch signal	BEAN
ECM	Passenger Door ECU	Shift position R signal	CAN

HINT:

*1: w/o Smart key system

*2: w/ Smart key system

*3: w/ Raindrop sensor