


# LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE

7614H-01

## REPLACEMENT

### HINT:

- The installation procedures are the removal procedures in reverse order.
  - A bolt without torque specification is a standard bolt (see page 03-2).
1. REMOVE REAR COMBINATION LAMP SERVICE COVER RH (See page 75-47)
  2. REMOVE REAR COMBINATION LAMP SERVICE COVER LH (See page 75-47)
  3. REMOVE LUGGAGE COMPARTMENT LAMP ASSY NO.1 (See page 75-47)
  4. REMOVE BACK DOOR TRIM COVER (See page 75-47)

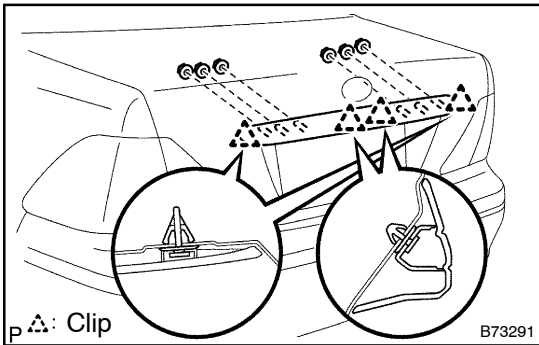

### 5. REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE

- (a) Remove the 6 nuts and key cylinder. Then remove the luggage compartment door opener switch.
- (b) Disengage the 4 clips and remove the garnish from the luggage compartment door.