
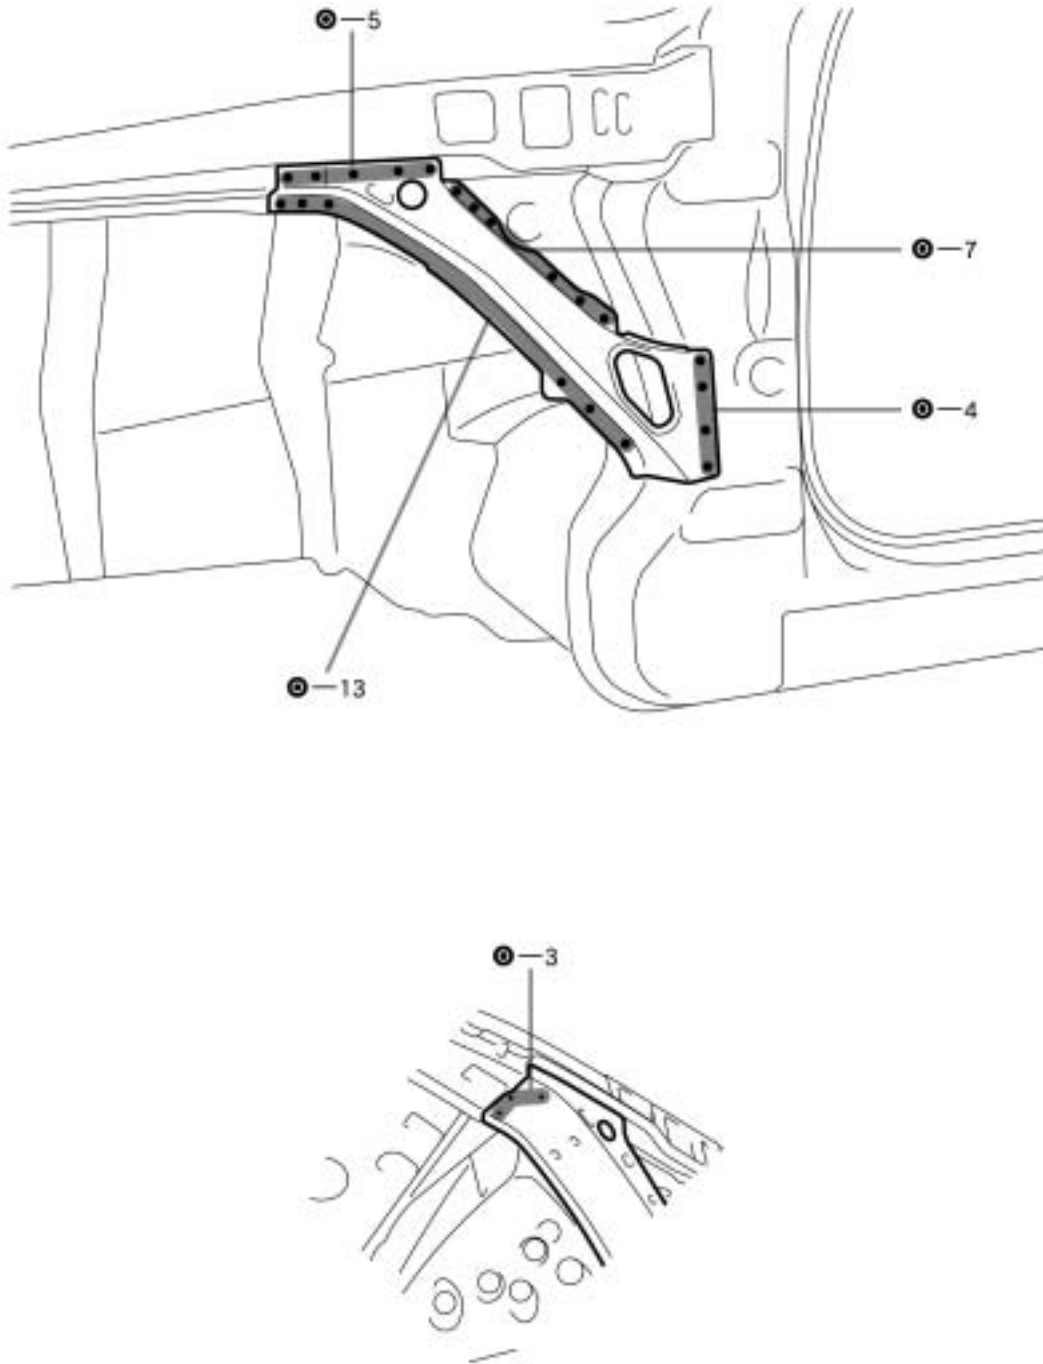


FRONT PILLAR LOWER GUSSET (ASSY) REPLACEMENT

1. REMOVE FRONT PILLAR LOWER GUSSET

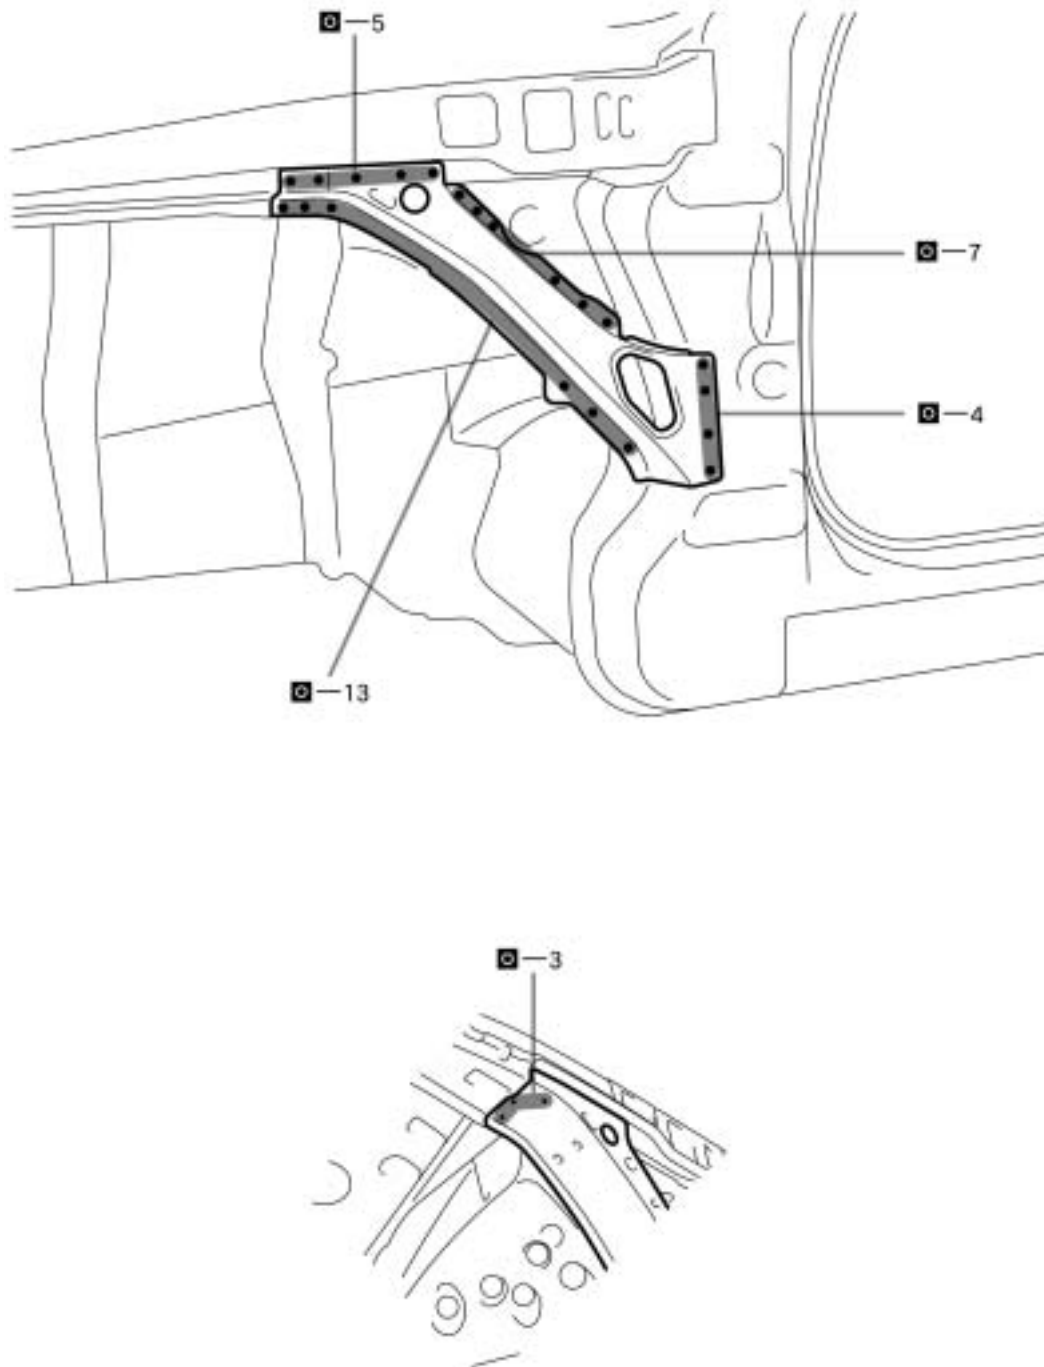

2. INSTALL FRONT PILLAR LOWER GUSSET

F11422A

3. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)**4. APPLYING ANTI-RUST AGENT**

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.