


## RADIATOR FAN MAIN RELAY INSPECTION

CO172-01

1. REMOVE FUSIBLE LINK BLOCK COVER
2. REMOVE FAN MAIN RELAY

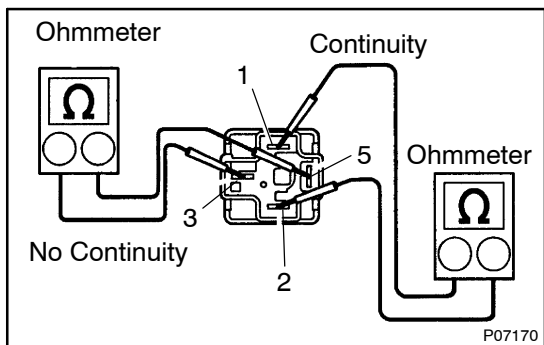


### 3. INSPECT FAN MAIN RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is continuity between terminals 3 and 5.
- If there is no continuity, replace the relay.

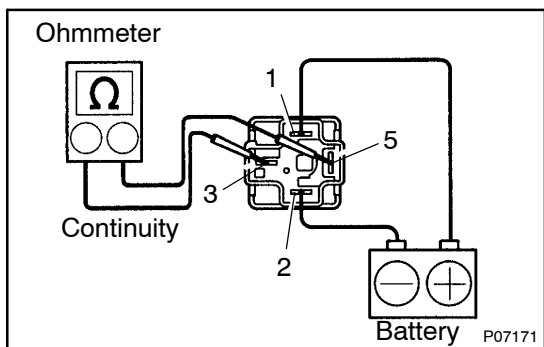

### 4. INSPECT FAN MAIN RELAY OPERATION

- (a) Apply battery positive voltage across terminals 1 and 2.
- (b) Using an ohmmeter, check that there is no continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

5. REINSTALL EFI MAIN RELAY
6. REINSTALL FAN MAIN RELAY
7. REINSTALL FUSIBLE LINK BLOCK COVER